


FRONT AXLE LH HUB BOLT REPLACEMENT

3005D-01

HINT:

Replace the RH side by the same procedures with LH side.


1. REMOVE FRONT WHEEL
2. SEPARATE FRONT DISC BRAKE CALIPER ASSY LH (See page 30-7)
3. REMOVE FRONT DISC

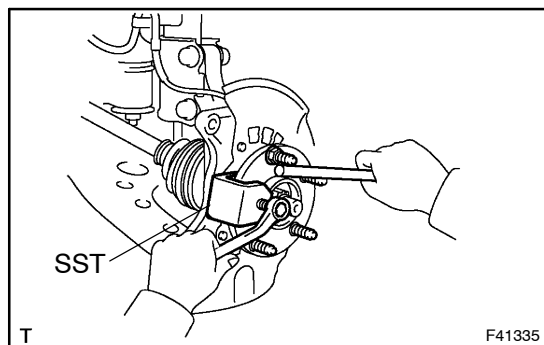

4. REMOVE FRONT AXLE LH HUB BOLT

- (a) Using SST and a screwdriver or an equivalent to hold, remove the hub bolt.

SST 09628-10011

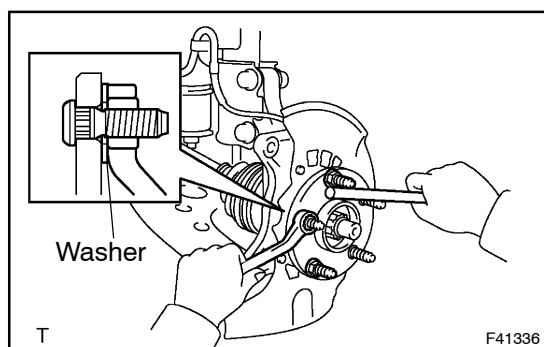

5. INSTALL FRONT AXLE LH HUB BOLT

- (a) Install a washer and nut to a new hub bolt as shown in the illustration.
- (b) Using a screwdriver to hold, install the hub bolt by torquing the nut.

6. INSTALL FRONT DISC

7. INSTALL FRONT DISC BRAKE CALIPER ASSY LH (See page 30-7)

8. INSTALL FRONT WHEEL

Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)