


## VACUUM PUMP ASSY (1CD-FTV)

### ON-VEHICLE INSPECTION

32091-01

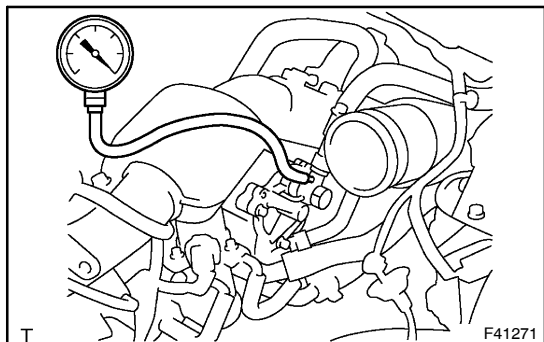

#### 1. OPERATIONING CHECK

- (a) Remove the air cleaner assy.
- (b) Connect the vacuum gauge to the vacuum pump.
- (c) Install the air cleaner assy.
- (d) Start the engine.
- (e) Measure the vacuum with the engine idling.

**Vacuum at standard (sea-level) atmospheric pressure (1,013 mbar) after engine running and when 2 minutes or more elapses:**  
**620 mmHg (24.4 in.Hg) or more**