


COLUMN SHIFT ASSY OVERHAUL


400DH-01

1. REMOVE SHIFT LEVER HOLE COVER
(See page 71-10)
2. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH(RHD STEERING POSITION TYPE)
(See page 71-10)
3. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL LH(LHD STEERING POSITION TYPE)
(See page 71-10)
4. REMOVE STEERING COLUMN COVER LWR
(See page 50-6)

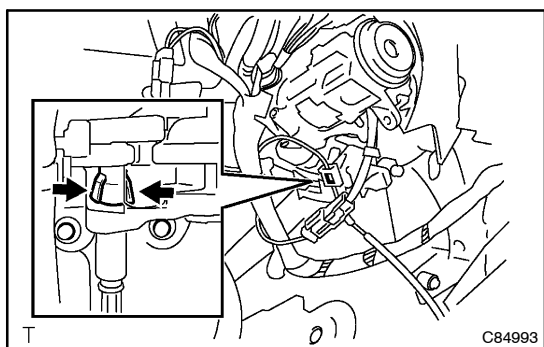


5. SEPARATE COLUMN SHIFT PARKING LOCK CABLE ASSY

- (a) Using needle-nose pliers, separate the parking lock cable from the control shaft assy.

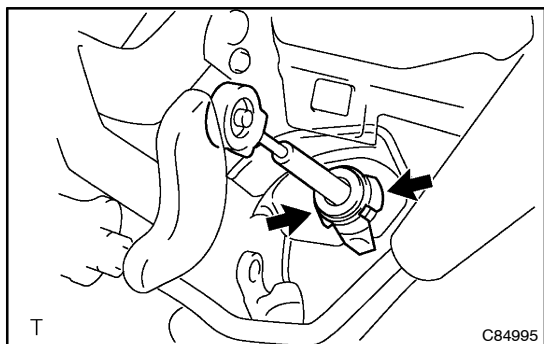


6. SEPARATE COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(LHD STEERING POSITION TYPE)

- (a) Separate the cable end from the control shaft assy.
- (b) Using pliers, separate the control cable from the control cable bracket.

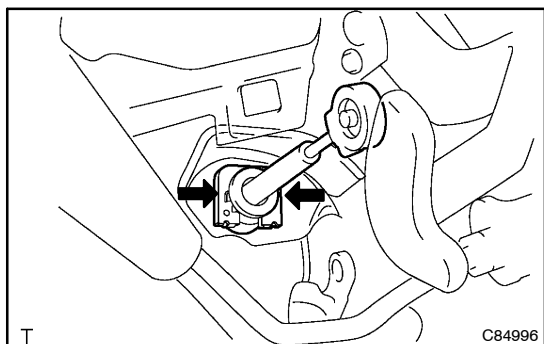

7. SEPARATE COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(RHD STEERING POSITION TYPE)

- (a) Separate the cable end from the control shaft assy.
- (b) Push the crow of the clip and separate the control cable from the control cable bracket.
- (c) Remove the clip from the control cable bracket.

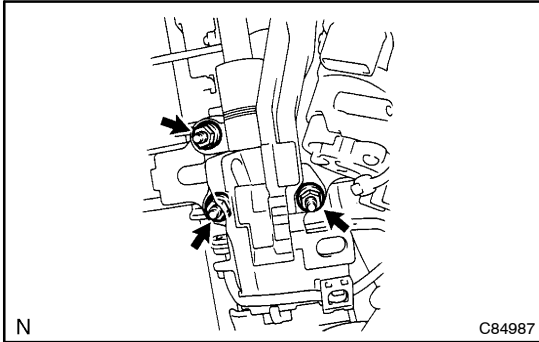

8. REMOVE CONTROL SHAFT ASSY

- (a) Disconnect the transmission control switch connector.
- (b) Remove the 3 nuts and control shaft assy from the steering column.




9. INSTALL CONTROL SHAFT ASSY

- (a) Install the control shaft assy to the steering column with the 3 nuts.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

- (b) Connect the transmission control switch connector.

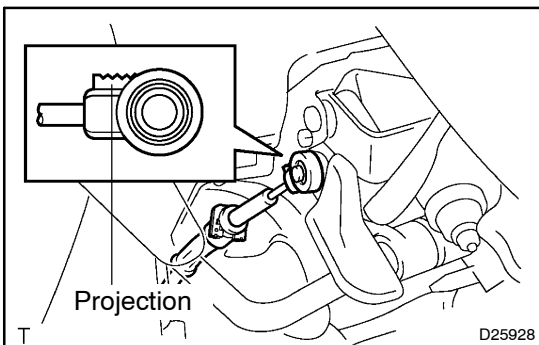


10. INSTALL COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(RHD STEERING POSITION TYPE)

- (a) Install the cable end to the control shaft assy.
- (b) Install the new clip to the control cable bracket.
- (c) Install the control cable to the control cable bracket.

NOTICE:

Install it with the uneven surface facing up.

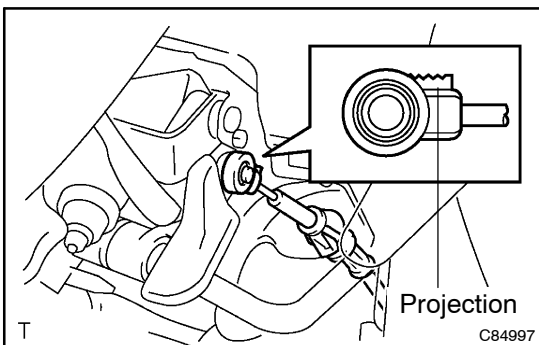


11. INSTALL COLUMN SHIFT TRANSMISSION CONTROL CABLE ASSY(LHD STEERING POSITION TYPE)

- (a) Install the cable end to the control cable bracket.
- (b) Install the control cable to the control shaft assy.

NOTICE:

Install it with the uneven surface facing up.

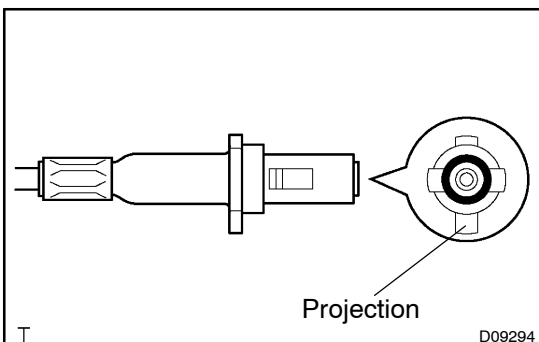

12. INSTALL COLUMN SHIFT PARKING LOCK CABLE ASSY

- (a) Set the projection of the parking lock cable to the bottom side of the vehicle, and install the parking lock cable to the control shaft assy.

13. INSTALL STEERING COLUMN COVER LWR
(See page 50-6)
14. INSTALL SHIFT LEVER HOLE COVER
(See page 71-10)
15. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL RH (RHD STEERING POSITION TYPE)
(See page 71-10)
16. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL LH (LHD STEERING POSITION TYPE)
(See page 71-10)