


COLUMN SHIFT PARKING LOCK CABLE ASSY REPLACEMENT


400DK-01

1. REMOVE SHIFT LEVER HOLE COVER
(See page 71-10)
2. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH (RHD STEERING POSITION TYPE)
(See page 71-10)
3. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL LH (LHD STEERING POSITION TYPE)
(See page 71-10)
4. REMOVE STEERING COLUMN COVER LWR
(See page 50-6)

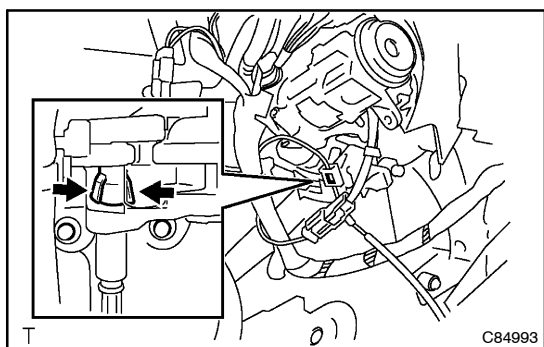


5. REMOVE COLUMN SHIFT PARKING LOCK CABLE ASSY

- (a) Using needle-nose pliers, disconnect the parking lock cable from the control shaft assy.

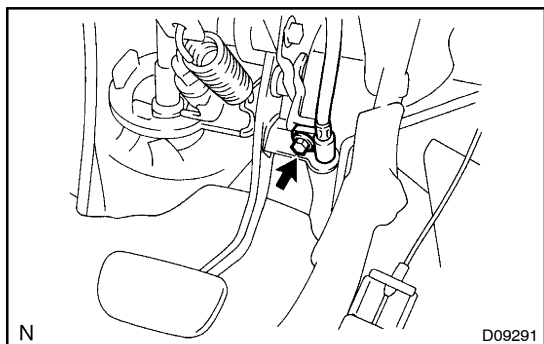


- (b) Remove the bolt and parking lock cable from the brake pedal bracket.

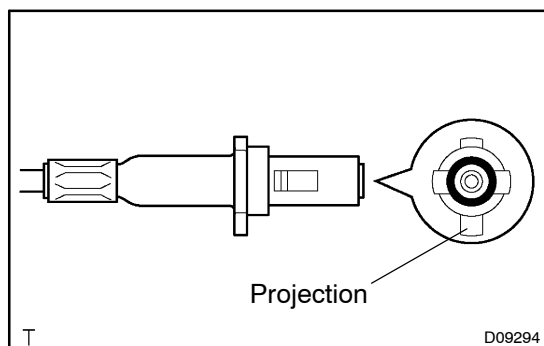

6. INSTALL COLUMN SHIFT PARKING LOCK CABLE ASSY

- (a) Set the projection of the parking lock cable to the bottom side of the vehicle, and install the parking lock cable.

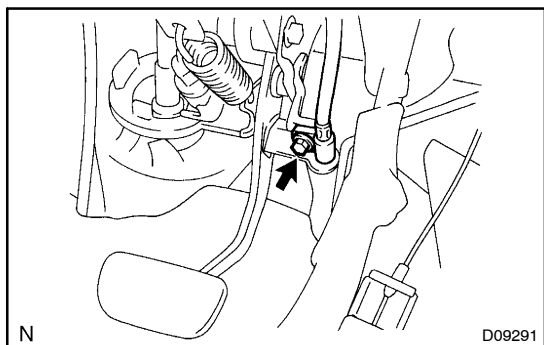

(b) Temporarily install the parking lock cable with the bolt.

7. ADJUST COLUMN/SHIFT/PARKING/LOCK/CABLE/ASSY
(See page 40-46)
8. INSPECT COLUMN/SHIFT/PARKING/LOCK/CABLE/ASSY
(See page 40-46)
9. INSTALL STEERING COLUMN COVER LWR
(See page 50-6)
10. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL LH (LHD STEERING POSITION TYPE)
(See page 71-10)
11. INSTALL INSTRUMENT PANEL FINISH LOWER PANEL RH (RHD STEERING POSITION TYPE)
(See page 71-10)
12. INSTALL SHIFT LEVER HOLE COVER
(See page 71-10)
13. CHECK KEY INTERLOCK OPERATION (See page 40-34)