

FLOOR SHIFT TRANSMISSION CONTROL CABLE ASSY REPLACEMENT

41049-01

1. PRECAUTION

NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary. (If the IC terminals are touched, the IC may be destroyed by static electricity.).

2. SEPARATE BATTERY NEGATIVE TERMINAL

3. REMOVE FLOOR SHIFT SHIFT LEVER KNOB SUB-ASSY

4. REMOVE CONSOLE BOX SUB-ASSY REAR

5. REMOVE INSTRUMENT PANEL BOX CENTER

(See page 71-10)

6. REMOVE INSTRUMENT PANEL ORNAMENT

(See page 71-10)

7. REMOVE AIR DUCT REAR NO.1

(a) Remove the air duct rear No. 1 RH.

8. REMOVE AIR DUCT REAR NO.1


(a) Remove the air duct rear No. 1 LH.

9. REMOVE AIR BAG SENSOR ASSY CENTER

(See page 60-50)

10. REMOVE FLOOR SHIFT TRANSMISSION CONTROL CABLE ASSY


(a) Remove the 2 clips and 2 washers and separate the 2 cable ends of the control cable assy from the transaxle.

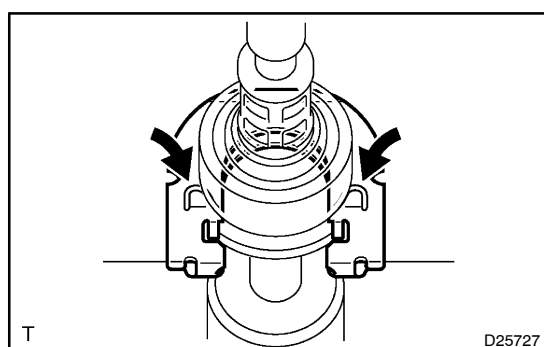


(b) Push the claw of the 2 clips and separate the control cable assy from the bracket.

(c) Remove the 2 clips from the bracket.


(d) Separate the control cable assy from the clamp.

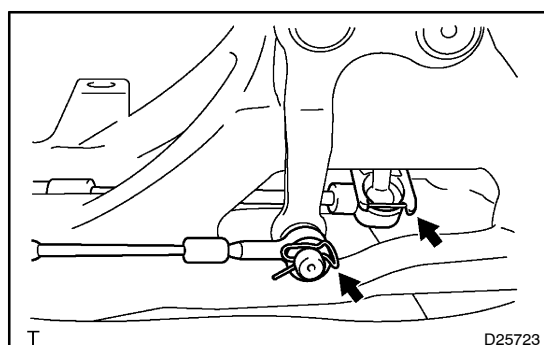

(e) Remove the 2 clips and washer and separate the 2 cable ends of the control cable assy from the shift lever assy.

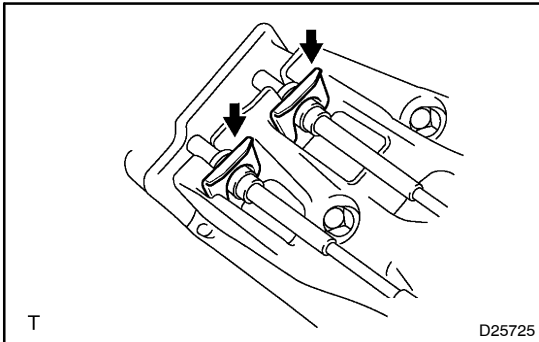


- (f) Remove the 2 clips and separate the control cable assy from the shift lever assy.

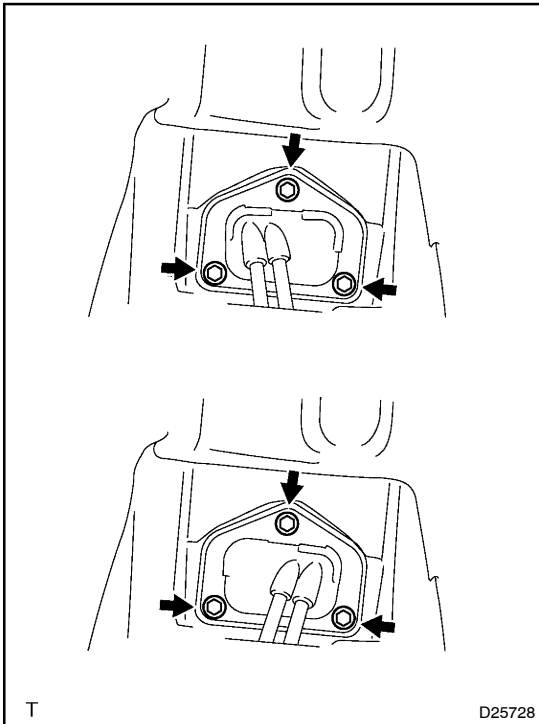


- (g) Remove the 3 bolts.
 (h) Pull out the control cable assy from the floor.
11. INSTALL FLOOR SHIFT TRANSMISSION CONTROL CABLE ASSY

- (a) Pull in the control cable assy to the floor.

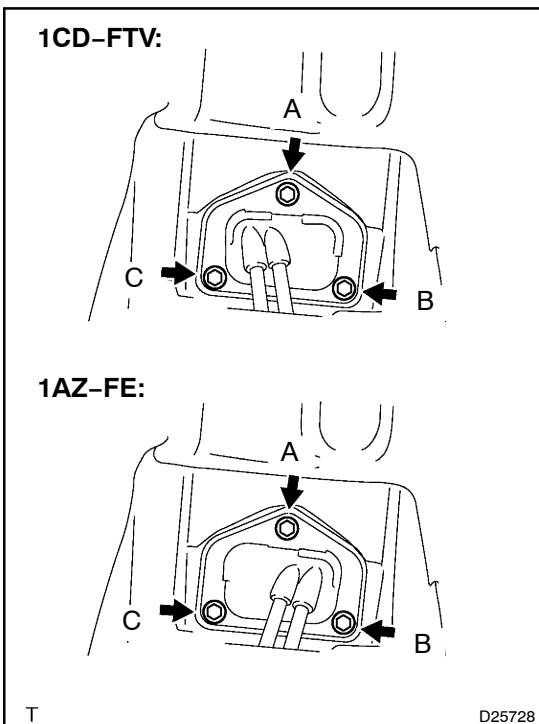


- (b) Install the 3 bolts.
Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)


HINT:
 Tighten them in the order, A, B and C.

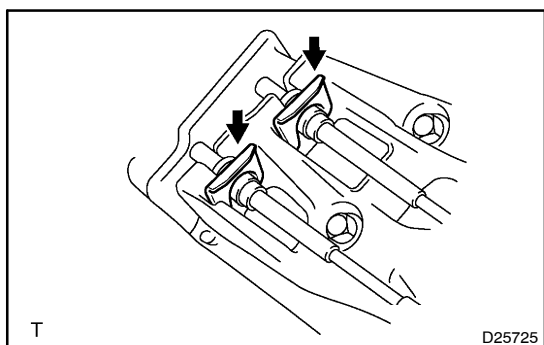

- (c) Connect the control cable assembly and install the 2 clips to the shift lever assembly.

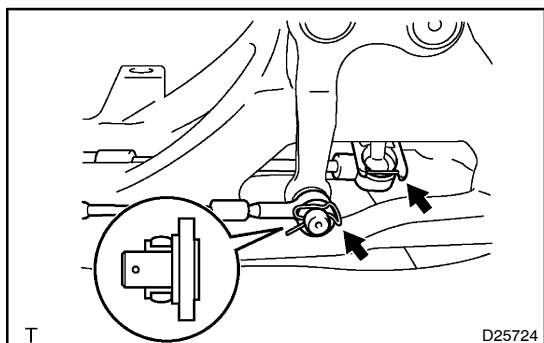

- (d) Connect the 2 cable ends as shown in the illustration.
 (e) Install the washer and 2 clips.
 (f) Connect the control cable assembly to the clamp.
 (g) Install the 2 new clips to the bracket.

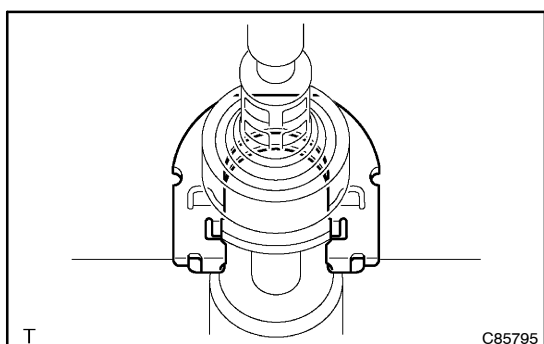

- (h) Connect the control cable assembly to the bracket.

NOTICE:

Insert the cable securely.

- (i) Connect the 2 cable ends to the transaxle and install the 2 washers and 2 clips.

12. INSTALL AIR BAG SENSOR ASSY CENTER

(See page 60-50)

SST 09249-63010

13. INSPECT SRS WARNING LIGHT (See page 60-9)