

## REPLACEMENT

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

- Turn the A/C switch ON.
  - Operating the cooler compressor at the engine rpm of approx. 1,000 for 5 to 6 min., circulate the refrigerant and collect compressor oil remaining in each component into the cooler compressor as much as possible.
  - Stop the engine.
  - Let the refrigerant gas out.
- SST 07110-58060 (07117-58080, 07117-58090, 07117-78050, 07117-88060, 07117-88070, 07117-88080)

### 2. CHARGE REFRIGERANT


- Using a vacuum pump, perform a vacuum purging.
- Charge refrigerant, HFC-134a (R134a).

**Standard:**

**Single A/C: 500 ± 30 g (17.63 ± 1.05 oz.)**

**Dual A/C: 800 ± 30 g (28.21 ± 1.05 oz.)**

SST 07110-58060 (07117-58060, 07117-58070, 07117-58080, 07117-58090, 07117-78050, 07117-88060, 07117-88070, 07117-88080)

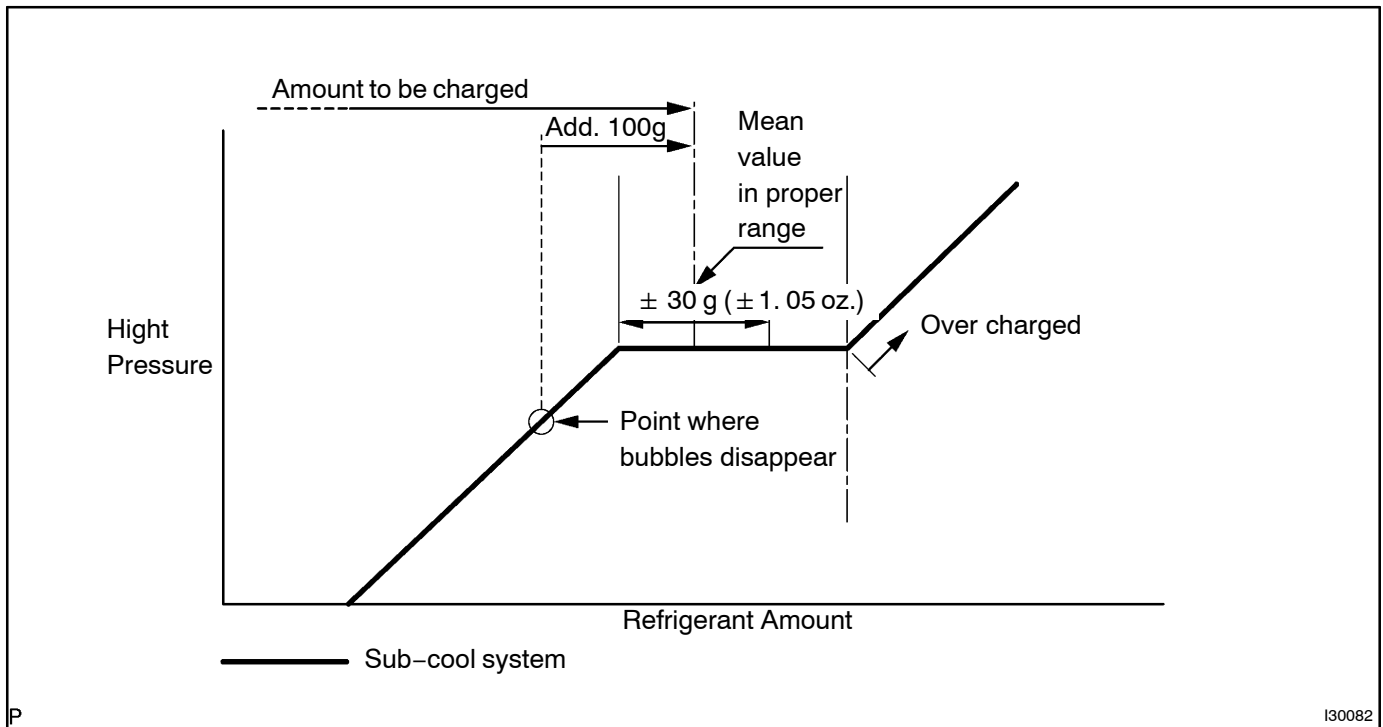

### 3. WARM UP ENGINE

### 4. INSPECT LEAKAGE OF REFRIGERANT