


## REPLACEMENT

HINT:

COMPONENTS: [See page 55-93](#)

1. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH (RHD STEERING POSITION TYPE)  
([See page 71-10](#))
2. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL LH (LHD STEERING POSITION TYPE)  
([See page 71-10](#))

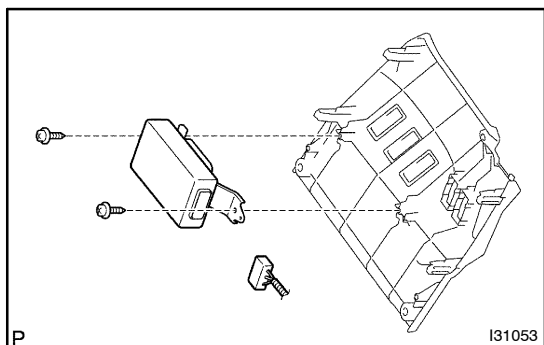

### 3. REMOVE HEATER AMPLIFIER ASSY

- (a) Disconnect the connector.
- (b) Remove the 2 screws and heater amplifier assy.