


REPLACEMENT

HINT:

COMPONENTS: (See page 60-49)

1. PRECAUTION (See page 60-1)
2. SEPARATE BATTERY NEGATIVE TERMINAL (See page 60-1)
3. REMOVE INSTRUMENT PANEL BOX CENTER
(See page 71-10)
4. REMOVE INSTRUMENT PANEL ORNAMENT
(See page 71-10)
5. REMOVE AIR DUCT REAR NO.1
6. REMOVE AIR DUCT REAR NO.1

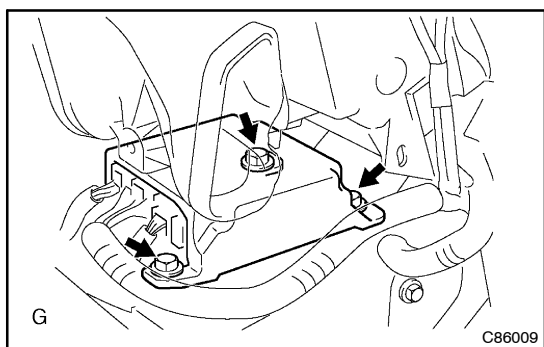

7. REMOVE AIR BAG SENSOR ASSY CENTER

- (a) Disconnect the 3 connectors from the air bag sensor assy center.
- (b) Remove the 3 bolts and air bag sensor assy center.

8. INSTALL AIR BAG SENSOR ASSY CENTER

- (a) Check that the ignition switch turn OFF.
- (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Temporarily install the air bag sensor assy center with the 3 bolts.
- (d) Tighten the 3 bolts to the specified torque.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

- (e) Connect the connector to the air bag sensor assy center.
- (f) Check that no play is identified.
- (g) Check that the water-proof sheet is properly set.

9. INSPECT SRS WARNING LIGHT (See page 05-403)