


## REPLACEMENT

HINT:

COMPONENTS: [See page 60-51](#)

1. **PRECAUTION** [\(See page 60-1\)](#)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** [\(See page 60-1\)](#)

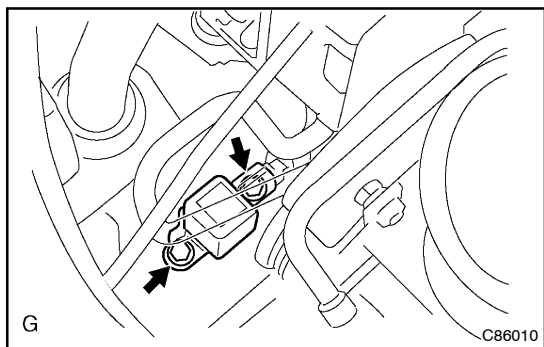

### 3. REMOVE AIR BAG FRONT RH SENSOR

- (a) Disconnect the connector from the front airbag sensor RH.
- (b) Remove the 2 bolts and front airbag sensor RH.

### 4. INSPECT AIR BAG FRONT RH SENSOR

[\(See page 60-9\)](#)

### 5. INSTALL AIR BAG FRONT RH SENSOR

- (a) Check that the ignition switch is OFF.
- (b) Check that the battery negative terminal is disconnected.

#### NOTICE:

**Do not start the operation for 90 seconds after removing the terminal.**

- (c) Install the front airbag sensor RH with the 2 bolts.  
**Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)**
- (d) Connect the connector to the front airbag sensor RH.
- (e) Check that no play is identified.

### 6. **INSPECT SRS WARNING LIGHT** [\(See page 05-403\)](#)