


REPLACEMENT

HINT:

COMPONENTS: [See page 60-51](#)

1. **PRECAUTION** ([See page 60-1](#))
2. **REMOVE BATTERY**
([See page 60-1](#))
3. **SEPARATE FRONT FENDER LINER RH (1AZ-FE ENGINE TYPE)**
([See page 76-2](#))
4. **SEPARATE FRONT FENDER LINER LH (1AZ-FE ENGINE TYPE)**
([See page 76-2](#))
5. **REMOVE ENGINE UNDER COVER RH (1AZ-FE ENGINE TYPE)**
([See page 76-2](#))
6. **REMOVE ENGINE UNDER COVER LH (1AZ-FE ENGINE TYPE)**
([See page 76-2](#))
7. **REMOVE FRONT BUMPER COVER (1AZ-FE ENGINE TYPE)**
([See page 76-2](#))
8. **REMOVE HEADLAMP UNIT ASSY LH (1AZ-FE ENGINE TYPE)**
([See page 65-14](#))
9. **REMOVE AIR CLEANER DUCT (1AZ-FE ENGINE TYPE)**
10. **REMOVE AIR CLEANER ASSY (1AZ-FE ENGINE TYPE)**

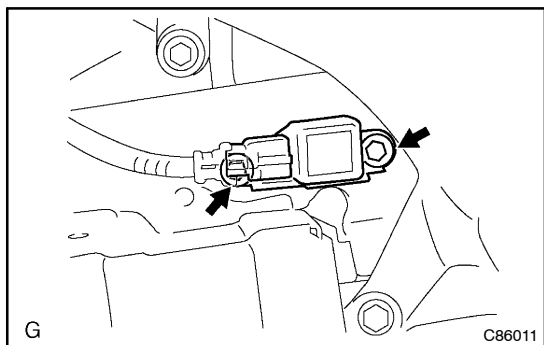

11. REMOVE AIR BAG SENSOR FRONT LH

- (a) Disconnect the connector from the front airbag sensor LH.
- (b) Remove the 2 bolts and front airbag sensor LH.

12. INSPECT AIR BAG SENSOR FRONT LH

([See page 60-9](#))

13. INSTALL AIR BAG SENSOR FRONT LH

- (a) Check that the ignition switch is OFF.
- (b) Check that the battery negative terminal is disconnected.

NOTICE:

Do not start the operation for 90 seconds after removing the terminal.

- (c) Install the front airbag sensor LH with the 2 bolts.
Torque: 7.5 N·m (76 kgf·cm, 66 in. lbf)
- (d) Connect the connector to the front airbag sensor LH.
- (e) Check that no play is identified.

14. INSPECT SRS WARNING LIGHT ([See page 05-403](#))