


ADJUSTMENT

1. PUT VEHICLE THESE CONDITIONS

- (a) Tire inflation pressure is the specified value.
- (b) Start the engine.

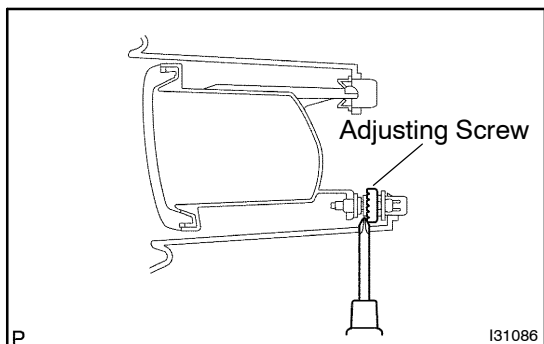

2. ADJUST FOG LIGHT AIM

- (a) The fog light aim can be adjusting by moving the aiming screw in the vertical direction.