

# CENTER STOP LAMP ASSY REPLACEMENT

65097-01

## 1. REMOVE BACK WINDOW GARNISH


(See page 75-21)

## 2. REMOVE REAR SPOILER SUB-ASSY(W/ REAR SPOILER)

(See page 76-8)

## 3. REMOVE CENTER STOP LAMP ASSY(W/ REAR SPOILER)


- (a) Using a small screwdriver, remove the 2 terminals of the center stop light assy from the connector, as shown in the illustration.

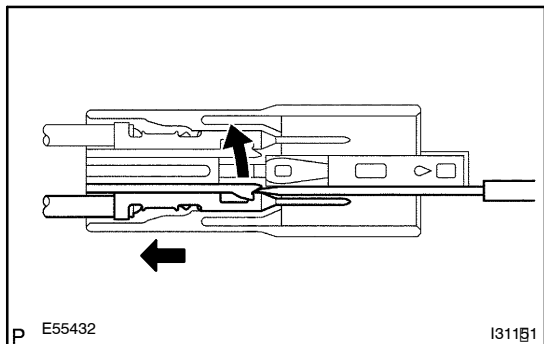

- (b) Install the strap to the wire harness of center stop light.  
(c) Remove the 2 screws.  
(d) Pass the connector through the inside of the rear spoiler and remove the center stop light assy.


HINT:

Leave the strap inside the spoiler.

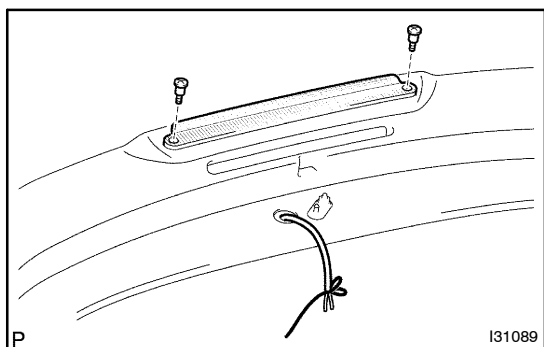


## 4. REMOVE CENTER STOP LAMP ASSY(W/O REAR SPOILER)


- (a) Release the 2 claws.  
(b) Disconnect the connector and center stop light assy.

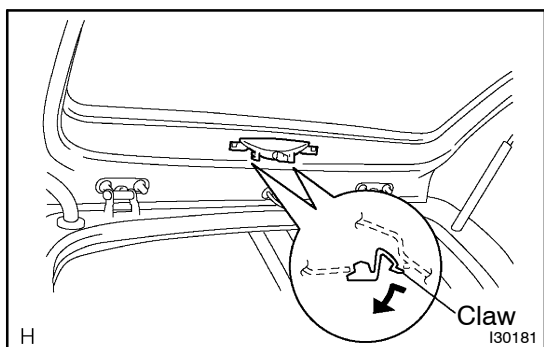

## 5. INSTALL CENTER STOP LAMP ASSY(W/ REAR SPOILER)

- (a) Clean the spoiler and the stop light assy with white gasoline.  
(b) Apply the tape to the rear spoiler, as shown in the illustration.  
(c) Install the strap to the new center stop light assy and pass the wire harness through the spoiler.

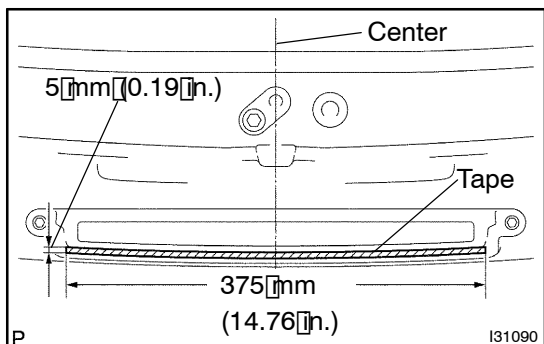

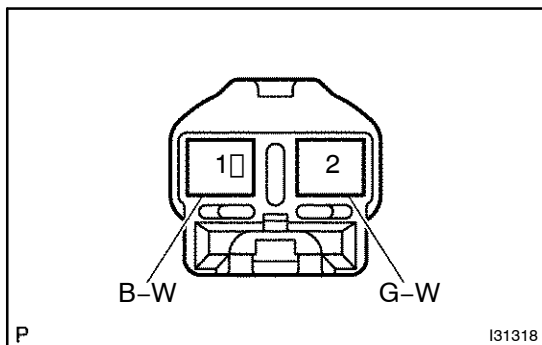

- (d) Connect the 2 terminals of the center stop light assy to the connector.

**NOTICE:**

When connecting the harness to the connector, be sure to connect each harness in the correct position as shown in the illustration.

**6. INSTALL REAR SPOILER SUB-ASSY(W/ REAR SPOILER)**  
(See [page 76-8](#))