


HEADLAMP DIMMER SWITCH ASSY REPLACEMENT

65098-01

1. REMOVE STEERING COLUMN COVER LWR
(See Page 50-6)
2. REMOVE STEERING COLUMN COVER UPR
(See Page 50-6)

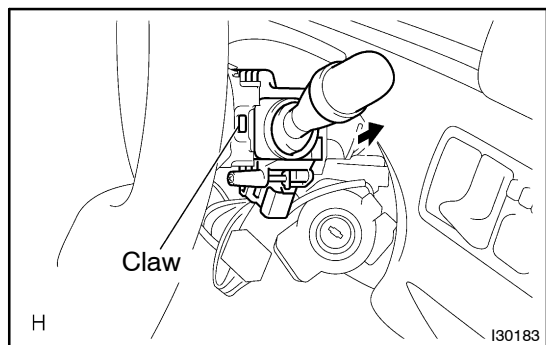

3. REMOVE HEADLAMP DIMMER SWITCH ASSY

- (a) Disconnect the connector.
- (b) Using a screwdriver, release the claw and pull out the headlight dimmer switch assy.

NOTICE:

Pressing the claw hard breaks the claw.

HINT:

Tape the screwdriver tip before use.