



ON-VEHICLE INSPECTION

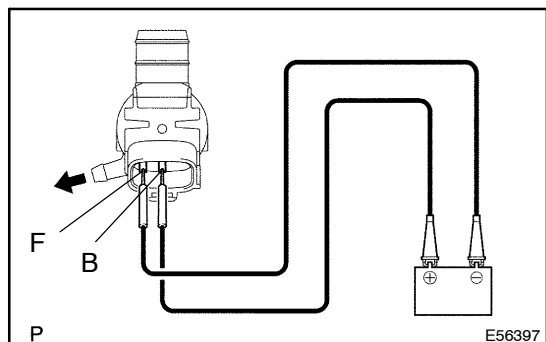

1. WASHER MOTOR

(a) Operation Check

- (1) Pour the water into the washer jar with the washer motor and the pump installed to the washer jar assy.
- (2) Connect the battery (+) to terminal B of the washer motor and the pump, the battery (-) to terminal F of the washer motor and the pump. Check that the water comes out from the washer jar.

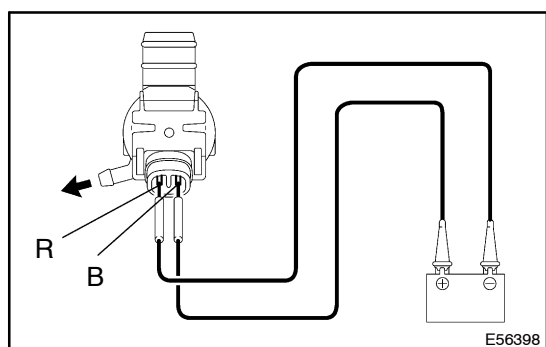

2. WASHER MOTOR

(a) Operation Check

- (1) Pour the water into the washer jar with the washer motor and the pump installed to the washer jar assy.
- (2) Connect the battery (+) to terminal B of the washer motor and the pump, the battery (-) to terminal R of the washer motor and the pump. Check that the water comes out from the washer jar.