

# WIPER RUBBER LH

## REPLACEMENT

6603M-01

### 1. REMOVE FR WIPER BLADE LH


- (a) Remove the FR wiper blade LH from the front wiper arm LH.

#### NOTICE:

**Do not fold down the front wiper arm with the front wiper blade being removed from it.**

### 2. REMOVE WIPER RUBBER LH

- (a) Remove the FR wiper rubber LH from the FR wiper blade LH.  
 (b) Remove the 2 wiper rubber backing plates from the wiper rubber LH.

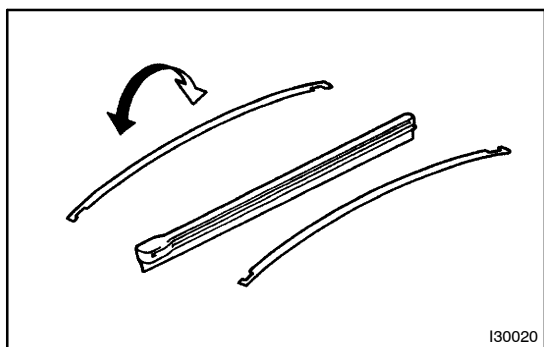


### 3. INSTALL WIPER RUBBER LH

- (a) Install the 2 wiper rubber backing plates to the wiper rubber LH.

#### NOTICE:

**Be careful not to install the packing plate back or front.**

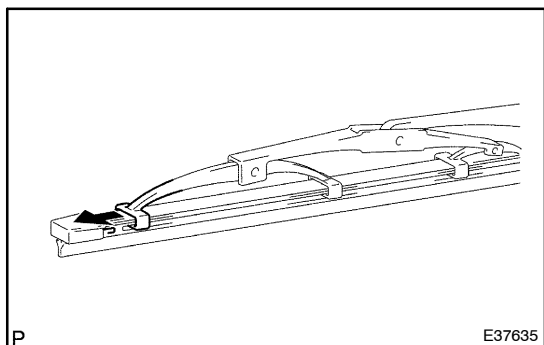

- (b) Install the wiper rubber LH in the way that the head part (Longer side) of the wiper rubber faces the arm axle side.

#### NOTICE:

**Push in the front wiper blade into the grooves of the wiper rubber to completely engage them.**