

RR WIPER MOTOR & LINK ASSY REPLACEMENT

6803N-01

1. REMOVE REAR WIPER ARM ASSY

- (a) Remove the nut and rear wiper arm assy.

2. REMOVE REAR WIPER MOTOR GROMMET

3. REMOVE BACK WINDOW GARNISH

(See page 75-21)

4. REMOVE REAR WINDOW SIDE GARNISH RH

(See page 75-21)

5. REMOVE REAR WINDOW SIDE GARNISH LH


(See page 75-21)

6. REMOVE ASSIST GRIP SUB-ASSY

(See page 75-21)

7. REMOVE BACK DOOR TRIM BOARD ASSY

(See page 75-21)

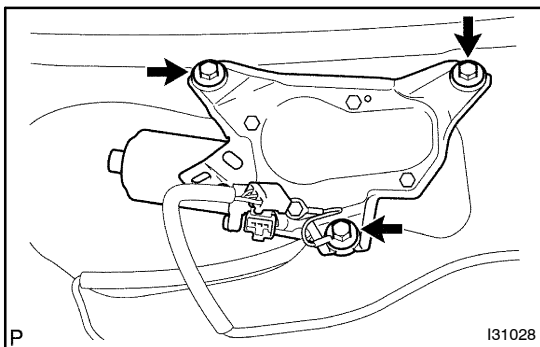

8. REMOVE RR WIPER MOTOR & LINK ASSY


- (a) Disconnect the connector.
(b) Remove the 3 bolts and RR wiper motor & link assy.

9. INSTALL RR WIPER MOTOR & LINK ASSY

- (a) Install the RR wiper motor & link assy with the 3 bolts.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

- (b) Connect the connector.

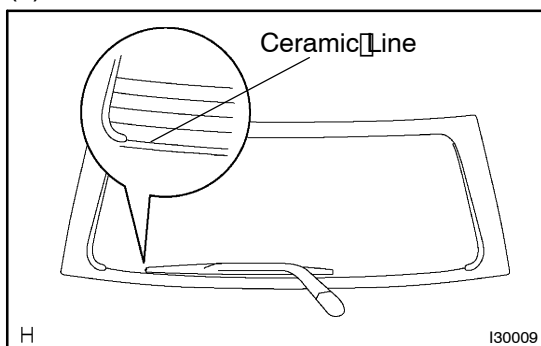

10. INSTALL REAR WIPER ARM ASSY

- (a) Clean the rear wiper pivot serration with the wire brush.
(b) Stop the RR wiper motor & link assy at the automatic stop position. Install the rear wiper arm assy at the position shown in the illustration.

Torque: 5.5 N·m (55 kgf·cm, 48 in·lbf)

HINT:

Hold down the arm hinge with hand to fasten a nut.

- (c) Operate the rear wiper while running the water or the washer fluid over the rear window, and check the wiping condition and that the rear wiper does not hit against the vehicle body.