


FRONT NO.2 SPEAKER ASSY REPLACEMENT

6705X-01

HINT:

COMPONENTS: [See page 67-1](#)

1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH LH
([See page 75-6](#))
2. REMOVE POWER WINDOW REGULATOR SWITCH ASSY
([See page 75-6](#))
3. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY LH
([See page 75-6](#))

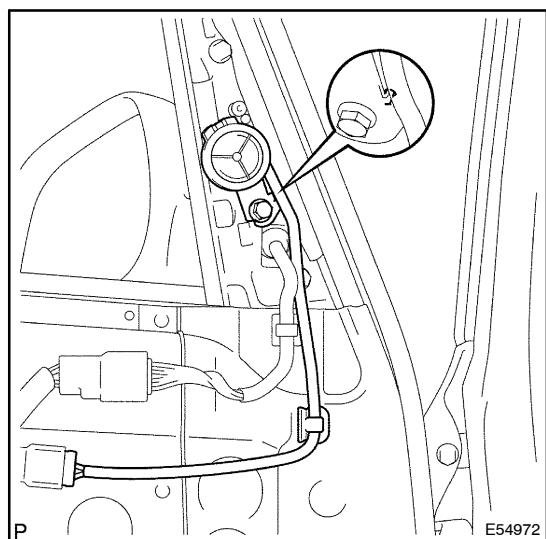

4. REMOVE FRONT NO.2 SPEAKER ASSY

- (a) Disconnect the connector and clamp.
- (b) Remove the bolt and front NO.2 speaker assy.