


INSPECTION

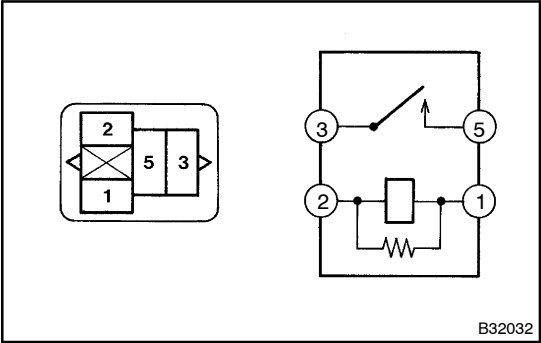

1. INSPECT RELAY

(a) Inspect the defogger relay (marking: DEF) continuity.

Condition	Tester connection	Specified condition
Constant	1 ⇔ 2	Continuity
Apply B+ between terminals 1 and 2	3 ⇔ 5	Continuity

If the continuity is not as specified, replace the relay.