

COMBINATION METER

PROBLEM SYMPTOMS TABLE

7103Y-01

Illumination:

Symptom	Suspect Area	See page
All illumination lights do not light up.	1. Combination Meter Assy 2. Wire Harness or Connector	– –
Only one illumination light does not light up.	1. Combination Meter Assy	–

Warning Lights and Buzzer:

Symptom	Suspect Area	See page
Check Engine warning light does not light up.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 1AZ-FE 1CD-FTV 05-1, 05-150 –
Discharge warning light does not light up.	1. Wire Harness or Connector 2. ECM 3. Combination Meter Assy	– 1AZ-FE 1CD-FTV 05-1, 05-150 –
Brake warning light does not light up.	1. Wire Harness or Connector 2. Skid control ECU 3. Combination Meter Assy	– 05-292 –
ABS warning light does not light up.	1. Wire Harness or Connector 2. Skid control ECU 3. Combination Meter Assy	– 05-292 –
SRS warning light does not light up.	1. Wire Harness or Connector 2. Airbag Sensor Assy 3. Combination Meter Assy	– 05-400 –
Open Door warning light does not light up.	1. Wire Harness or Connector 2. Door Courtesy Switch 3. Combination Meter Assy	– – –
Fuel Level warning light does not light up.	1. Wire Harness or Connector 2. Fuel Level Warning Switch 3. Combination Meter Assy	– – –
Low Oil Pressure warning light does not light up.	1. Wire Harness or Connector 2. Low Oil Pressure Warning Switch 3. Combination Meter Assy	– – –

Indicator Lights:

Symptom	Suspect Area	See page
Shift indicator lights do not light up.	1. Wire Harness or Connector 2. Neutral Start Switch Circuit 3. Combination Meter Assy	– 05-340 –
Turn indicator light does not light up.	1. Wire Harness or Connector 2. Turn Signal and Hazard Warning System 3. Combination Meter Assy	– – –
High Beam indicator light does not light up.	1. Wire Harness or Connector 2. Headlight Dimmer Switch 3. Combination Meter Assy	– – –
O/D OFF indicator light does not light up.	1. Wire Harness or Connector 2. O/D Main Switch Circuit 3. ECM 4. Combination Meter Assy	– 1AZ-FE 1CD-FTV 05-340 05-1, 05-150 –

Meter Gauges:

Symptom	Suspect Area	See page
Tachometer, Fuel Gauge and Water Temperature Gauge do not operate.	1. Wire Harness or Connector	–
	2. GAUGE Fuse	–
	3. Combination Meter Assy	–
Fuel Gauge does not operate or abnormal operation.	1. Wire Harness or Connector	–
	2. Fuel Receiver Gauge	–
	3. Combination Meter Assy	–