


INSPECTION

1. FRONT SEAT INNER BELT ASSY RH

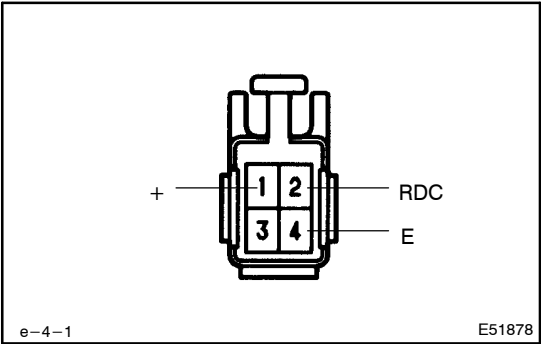

- (a) Check continuity.
- (1) Disconnect the connector from seat belt inner belt RH.
 - (2) Check continuity between terminals 1 and 4 when buckle switch condition, as shown in the chart.

Condition	Continuity
ON (Seat belt unfastened)	Continuity
OFF (Seat belt fastened)	No continuity