

REPLACEMENT

HINT:

See the components' drawing of roof headlining in [page 74-6](#).

1. REMOVE ROOF HEADLINING ASSY

([See page 76-23](#))


2. REMOVE TILT ROOF GLASS SUB-ASSY

- (a) Remove the 6 nuts.
- (b) Pull the sliding roof glass upward to remove it.

3. REMOVE TILT ROOF WEATHERSTRIP

4. REMOVE REMOVABLE ROOF HOUSING SUB-ASSY

- (a) Disconnect the 4 drain hoses from the housing.
- (b) Remove the 6 nuts, and remove the housing as shown in the illustration.

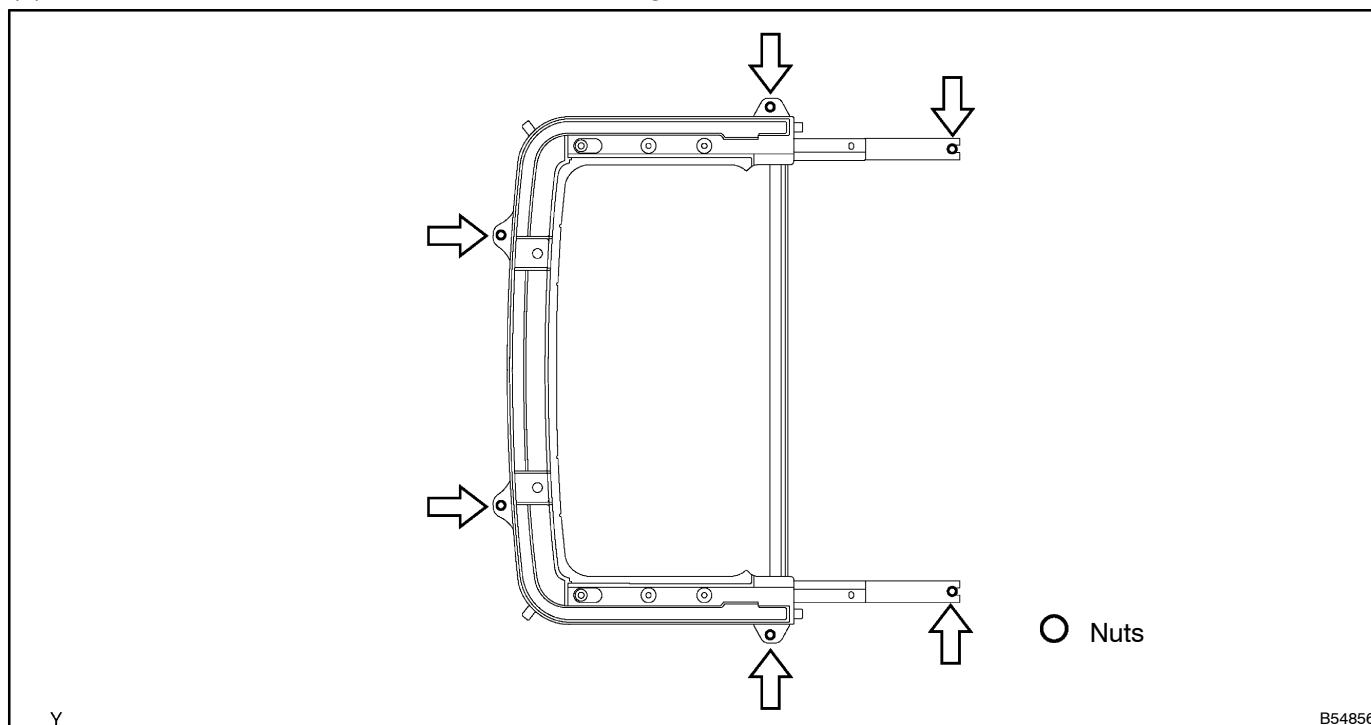

5. REMOVE SUNSHADE TRIM SUB-ASSY

- (a) Remove the 2 screws and 2 sunshade stopper.
- (b) Remove the sunshade trim.

6. REMOVE SUNSHADE RAIL NO.1 FRONT RH

- (a) Remove the 2 screws and sunshade rail No.1 front RH.

7. REMOVE SUNSHADE RAIL NO.1 FRONT LH

8. REMOVE TILT ROOF LOCK STRIKER

- (a) Remove the 2 bolts and tilt roof lock striker.

9. REMOVE TILT ROOF PANEL COVER