


# HOOD ADJUSTMENT

7506B-03

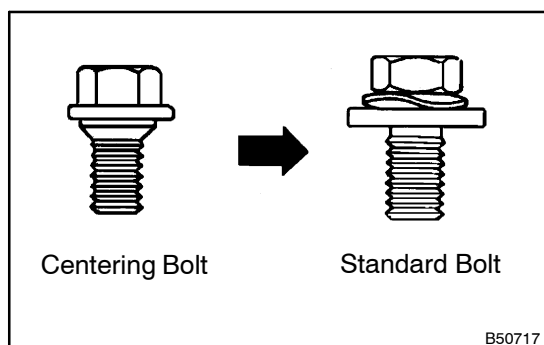



## HINT:

Since the centering bolt is used as a hood hinge set bolt and hood lock set bolt, the hood and hood lock can not be adjusted with it on. Substitute a bolt with washer for the centering bolt.

## 1. INSPECT HOOD SUB-ASSY


- (a) Check that the clearance is within the standard value.

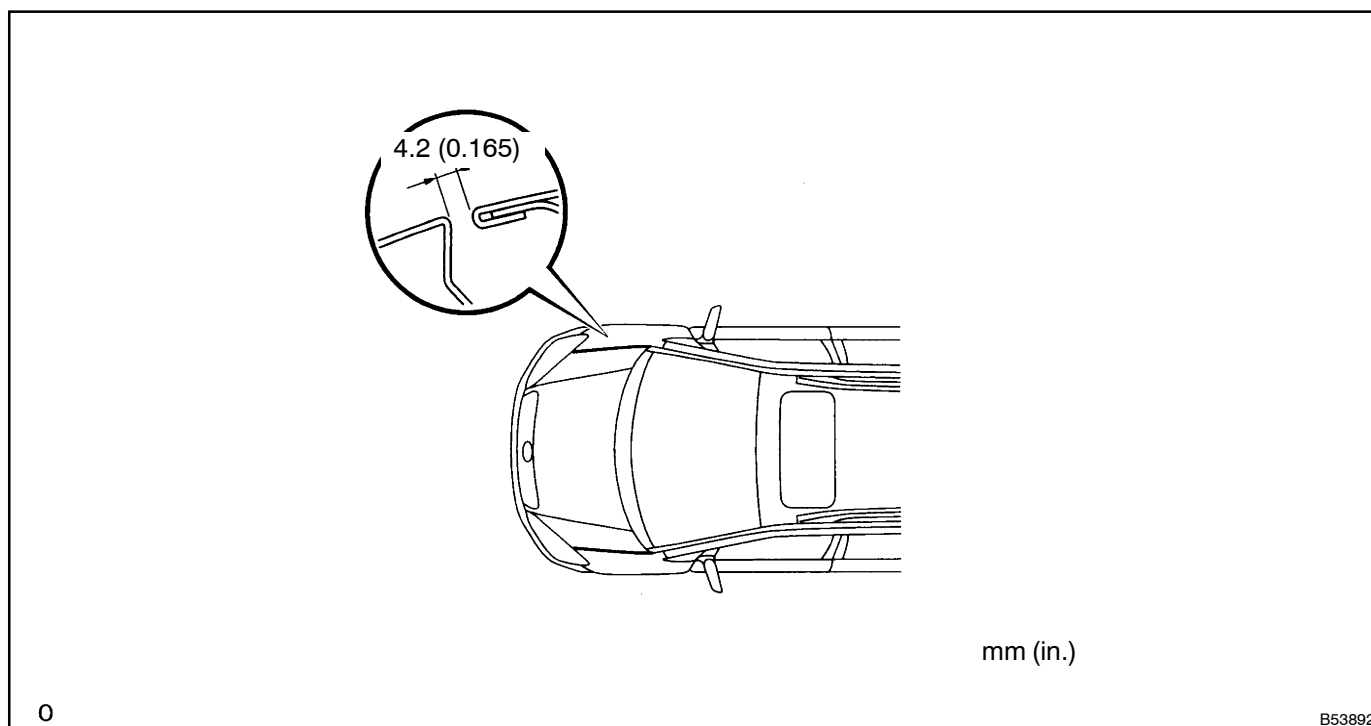

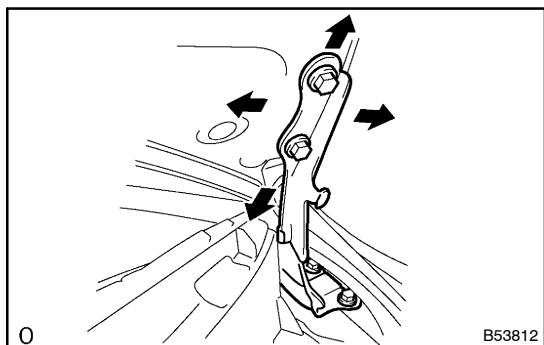


## 2. ADJUST HOOD SUB-ASSY

- (a) Adjust the hood by loosening the hood side hinge bolts.  
**Torque: 11.5 N·m (117 kgf·cm, 8.5 ft·lbf)**

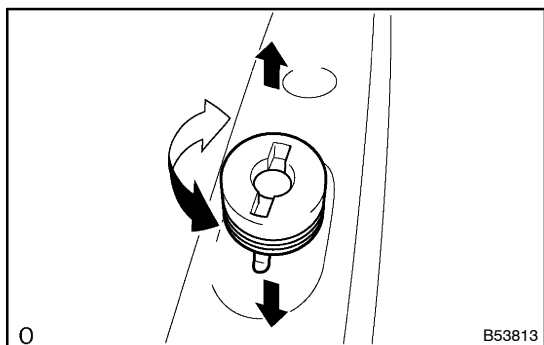

- (b) Adjust the hood by turning the cushions.

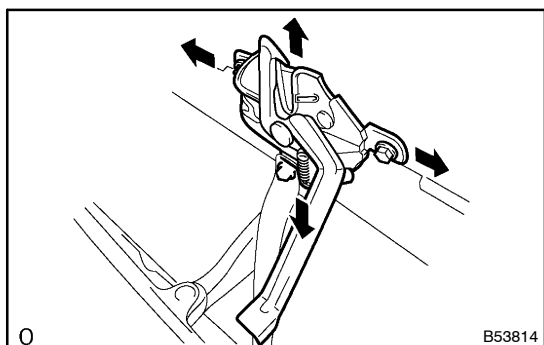

- (c) Adjust the lock by loosening the bolts.  
**Torque: 7.0 N·m (71 kgf·cm, 62 in·lbf)**