


OVERHAUL

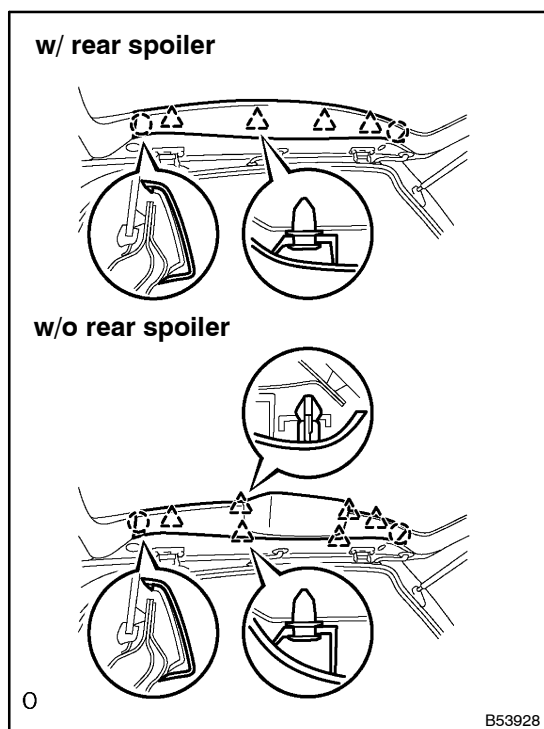


1. REMOVE BACK WINDOW GARNISH

- (a) Using a screwdriver, remove the back window garnish.

HINT:

Tape the screwdriver tip before use.

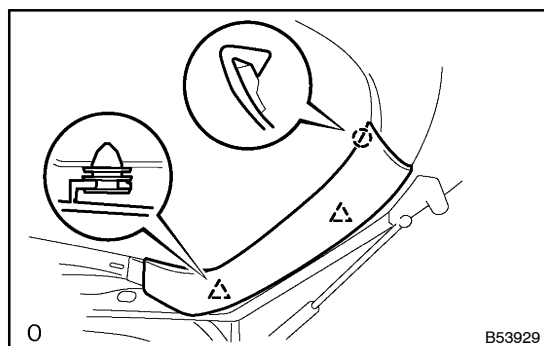


2. REMOVE REAR WINDOW SIDE GARNISH RH

- (a) Using a screwdriver, remove the rear window side garnish.

HINT:

Tape the screwdriver tip before use.

3. REMOVE REAR WINDOW SIDE GARNISH LH

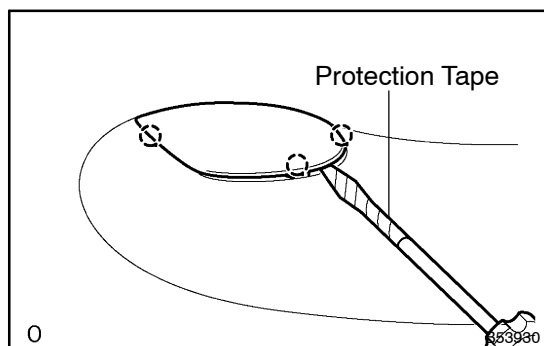


4. REMOVE ASSIST GRIP SUB-ASSY

- (a) Using a screwdriver, remove the assist grip cover.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 2 screws and assist grip.

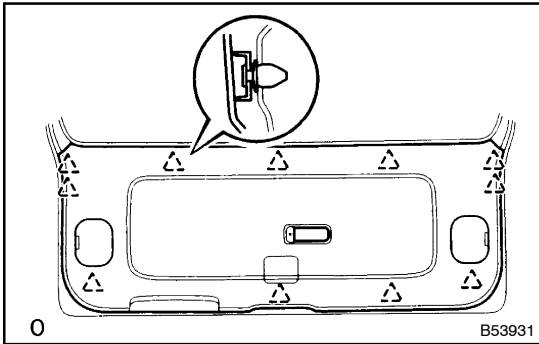

5. REMOVE BACK DOOR TRIM BOARD ASSY

- (a) Disconnect the connector.
- (b) Using a screwdriver, remove the back door trim panel.

HINT:

Tape the screwdriver tip before use.

6. REMOVE BACK DOOR LOCK ASSY

- (a) Disconnect the control cable from the outside handle.
- (b) Disconnect the connector.
- (c) Remove the 3 bolts and the back door lock assembly.

7. REMOVE BACK DOOR OUTSIDE HANDLE

- (a) Remove the 2 bolts and the back door outside handle.

8. REMOVE BACK DOOR GARNISH OUTSIDE

(See page 76-19)

9. INSTALL BACK DOOR LOCK ASSY

Torque: 15 N·m (153 kgf·cm, 11 ft·lbf)