


REPLACEMENT


HINT:

- Installation is in the reverse order of removal. But, the installation is indicated only when it has a point.
- In the RH side, work in the same procedure as in the LH side.

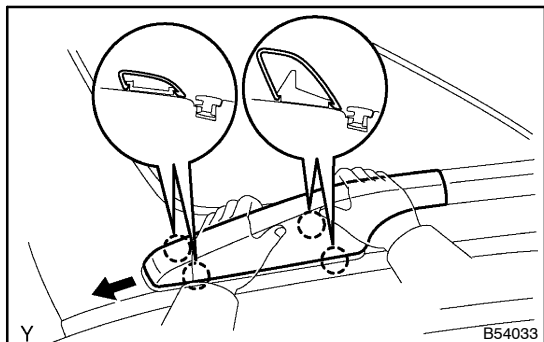

1. REMOVE ROOF RACK LEG COVER FRONT LH

- Slide the roof rack leg cover front forward, then remove it.

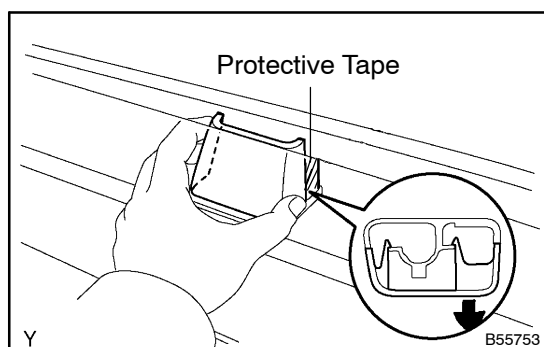


2. REMOVE ROOF RACK LEG COVER CENTER LH

- Using a scraper, remove the roof rack leg cover center.


HINT:

Tape the scraper tip before use.

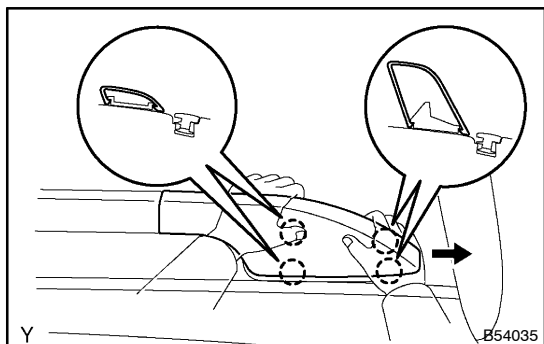

3. REMOVE ROOF RACK LEG COVER REAR LH

- Slide the roof rack leg cover rear backward, then remove it.

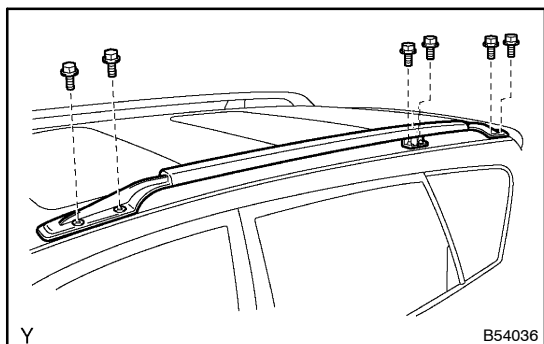

4. REMOVE ROOF RACK ASSY LH

- Remove the 6 bolts and the roof rack assembly.

5. INSTALL ROOF RACK ASSY LH

- Using white gasoline, clean the bolt and thread.
- Apply adhesive 1324 to the thread.
- Install the roof rack assembly with the 6 bolts.