

## TORQUE SPECIFICATION

Part Tightened	N·m	kgf·cm	ft·lbf	
Transmission case x Manual transaxle case	29	300	21	
Manual transaxle case x Transmission case	30	306	22	
Bearing retainer RR x Transmission case	42	430	31	
Manual transaxle case receiver x Manual transaxle case	7	70	62	
Gear shift head No.1 x Gear shift fork shaft No.2	24	240	17	
Gear shift fork No.1 x Gear shift fork shaft No.1	24	240	17	
Reverse shift arm bracket x Manual transaxle case	17	175	13	
Reverse restrict pin plug x Transmission case	13	133	9.6	
Oil receiver pipe No.1 x Transmission case	17	175	13	
Oil receiver pipe No.2 x Transmission case	17	175	13	
Clutch tube bracket x Transmission case	17	173	14	
Reverse idler gear shaft bolt x Transmission case	30	306	22	
Shift detente ball plug x Manual transaxle assy	25	250	18	
Transmission clutch hub No.3 gear shift fork shaft x input shaft	24	244	17	
Manual transmission output rear set nat. x Output shaft	123	1250	90	
Drain (MTM) plug sub-assy x Transmission case	49	500	36	
Manual transmission filler plug x Transmission case	49	500	36	
Back up lamp switch assy x Transmission case	40	410	30	
Manual transmission breather plug x Transmission case	49	500	36	
Lock ball assy No.1 x Transmission case	29	300	22	
Control shift cover x Transmission case	20	200	14	
Control shift lever x Shift & select lever assy	6.4	65	57 in.·lbf	
Selecting bell crank assy x Transmission case	20	200	14	
Release fork support x Manual transaxle case	E355 E356	39.2 47.1	400 480	28.91 34.74
Front differential ring gear x Front differential case	106	1080	77	
Selecting bell crank support sub-assy x Selecting bellcrank No.2 plate washer	106	1080	77	