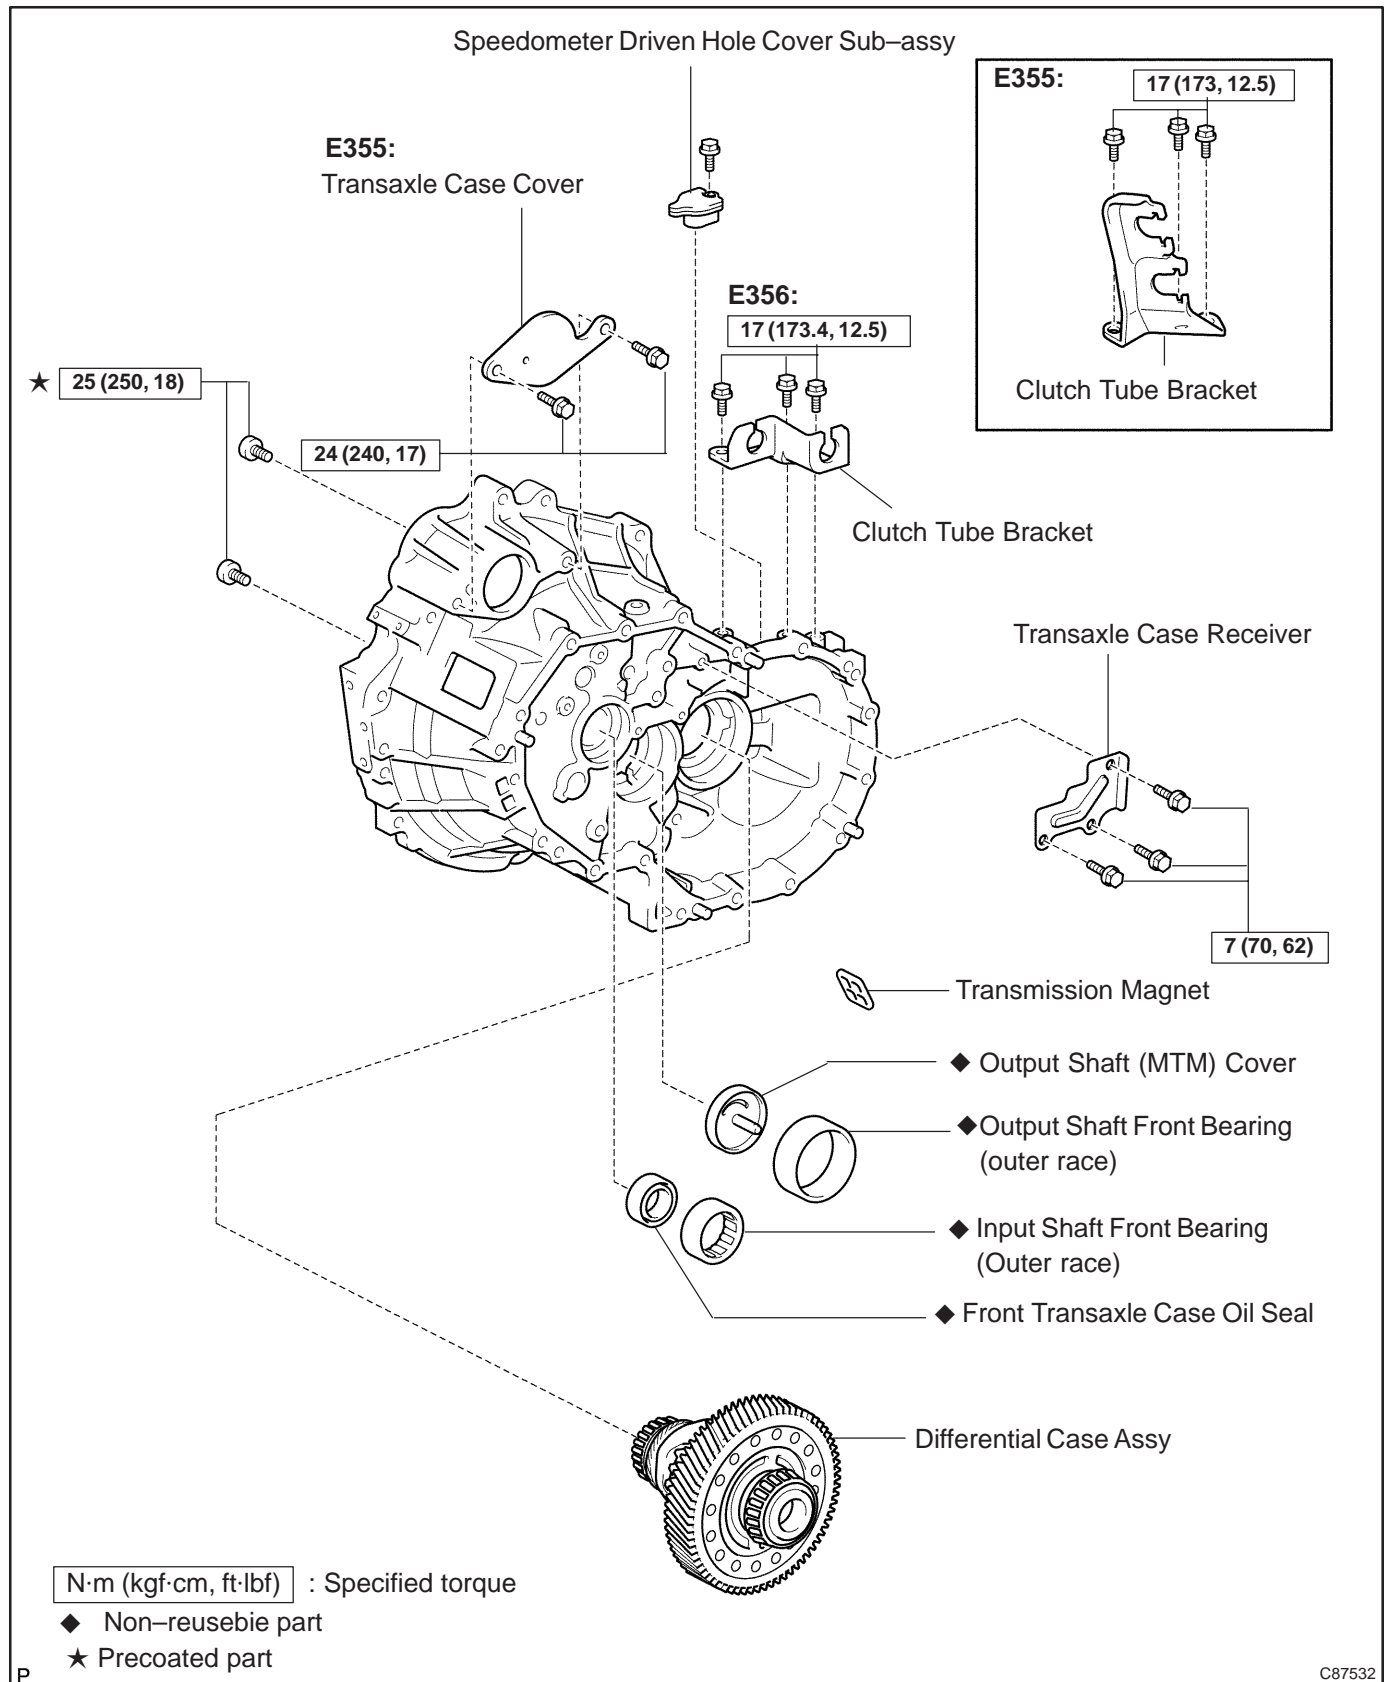


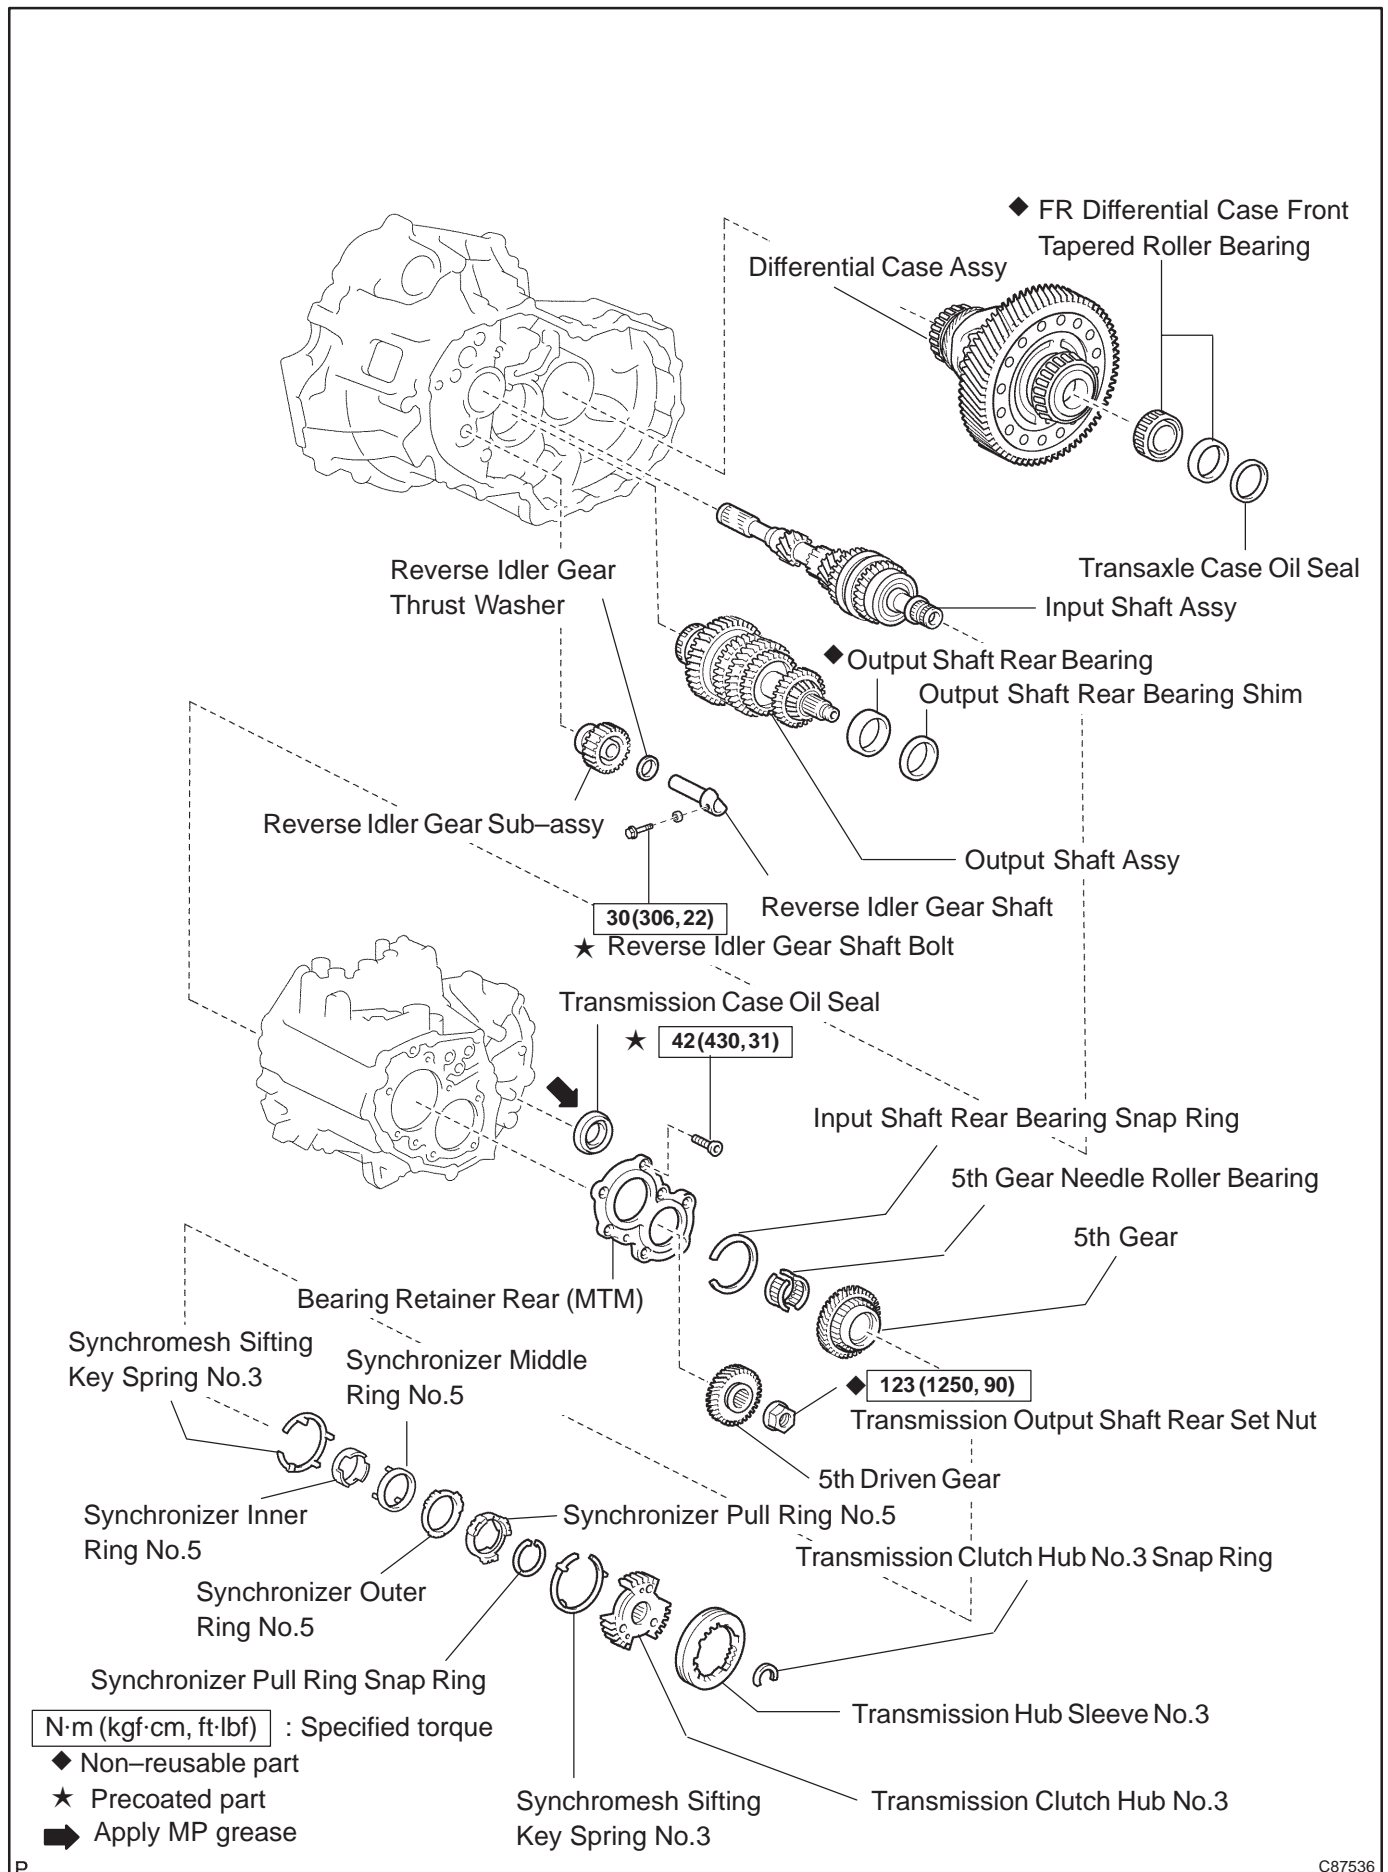
MANUAL TRANSMISSION / TRANSAXLE (E355/E356)

COMPONENTS

4103V-01

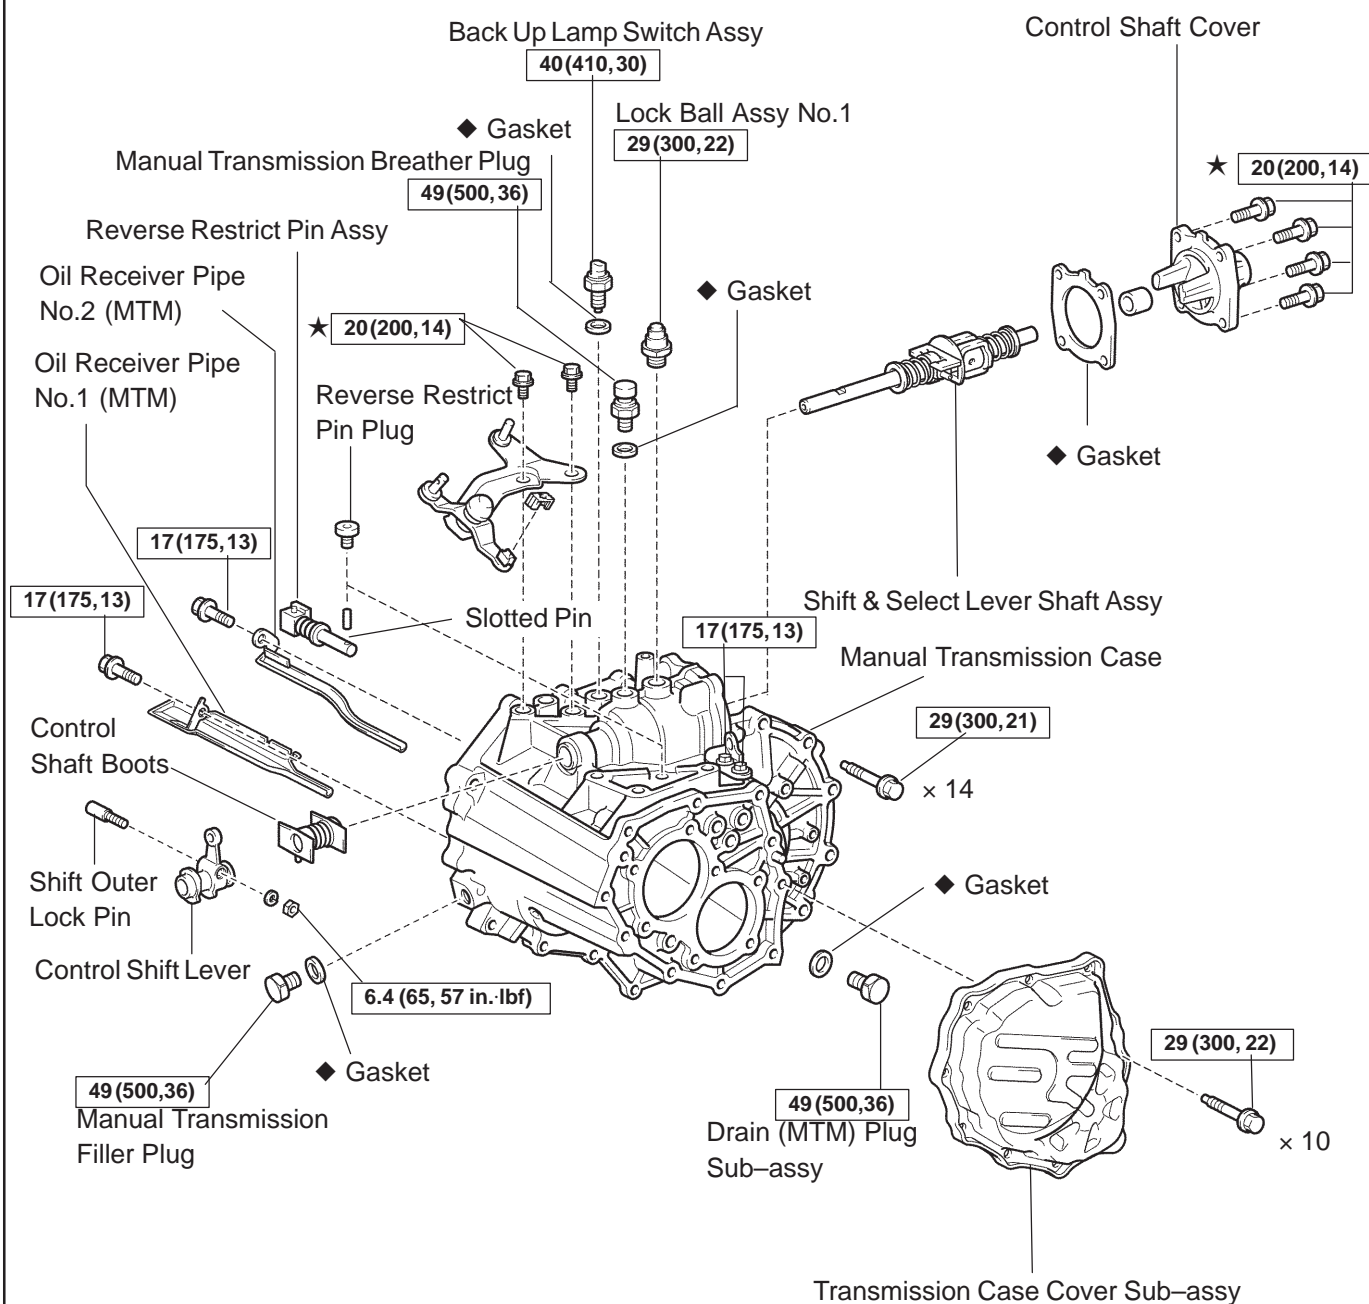


C87532



C87536



E355:

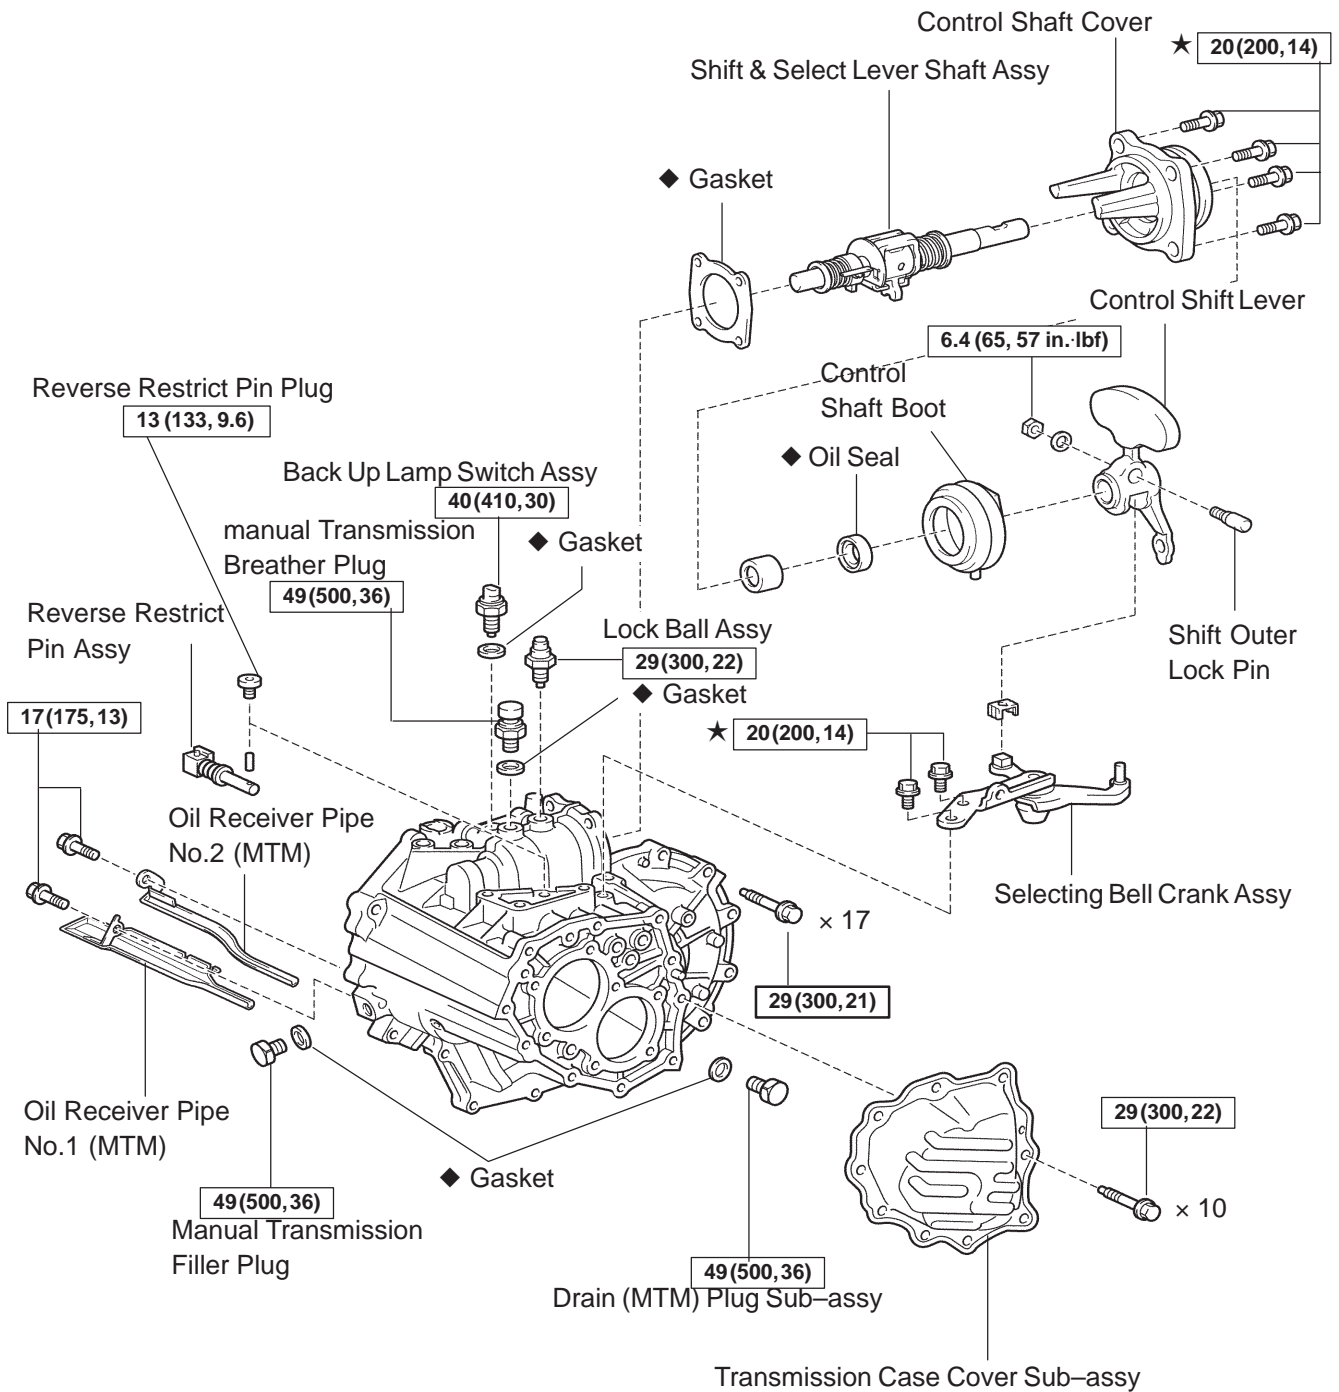
N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

★ Precoated part

P

C87533

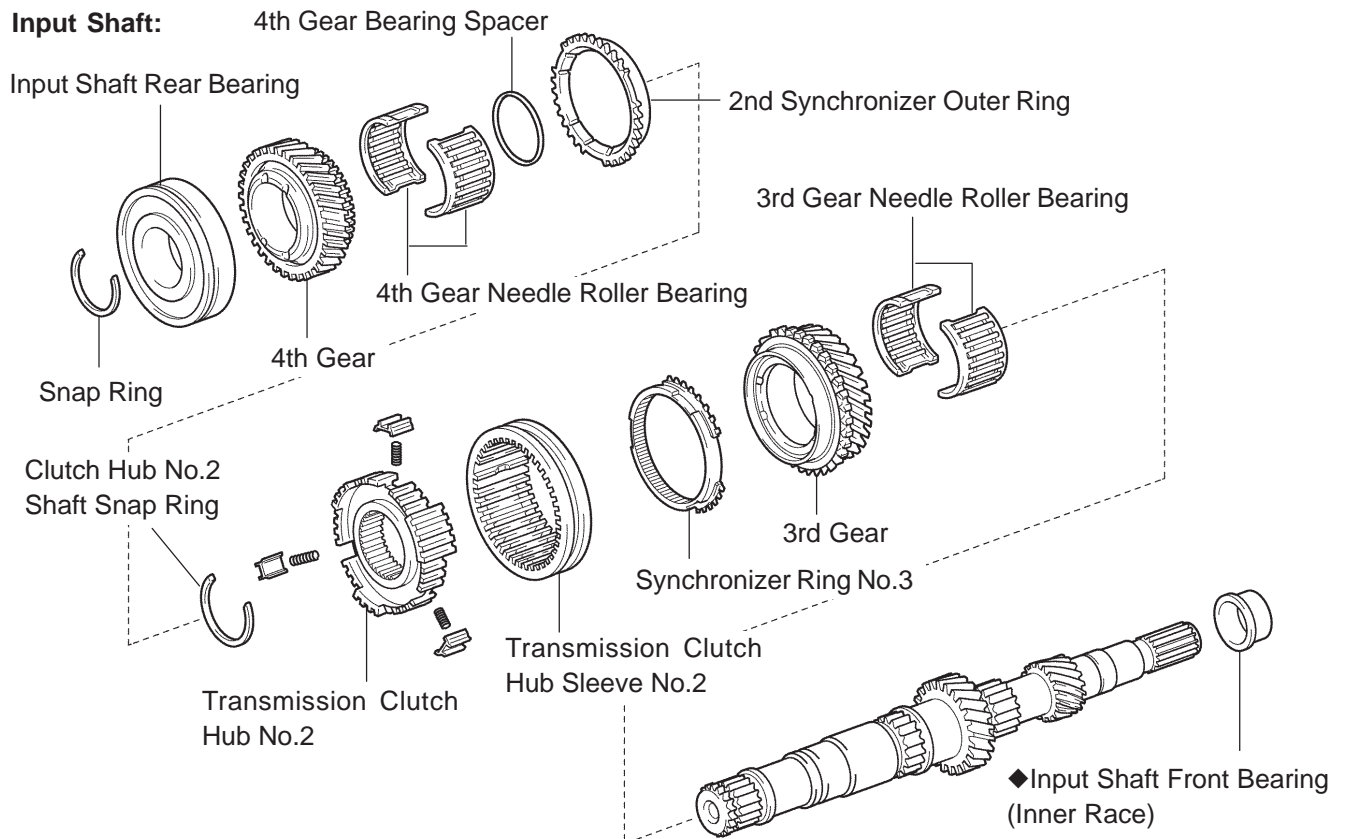
E356:

N·m (kgf·cm, ft·lbf) : Specified torque

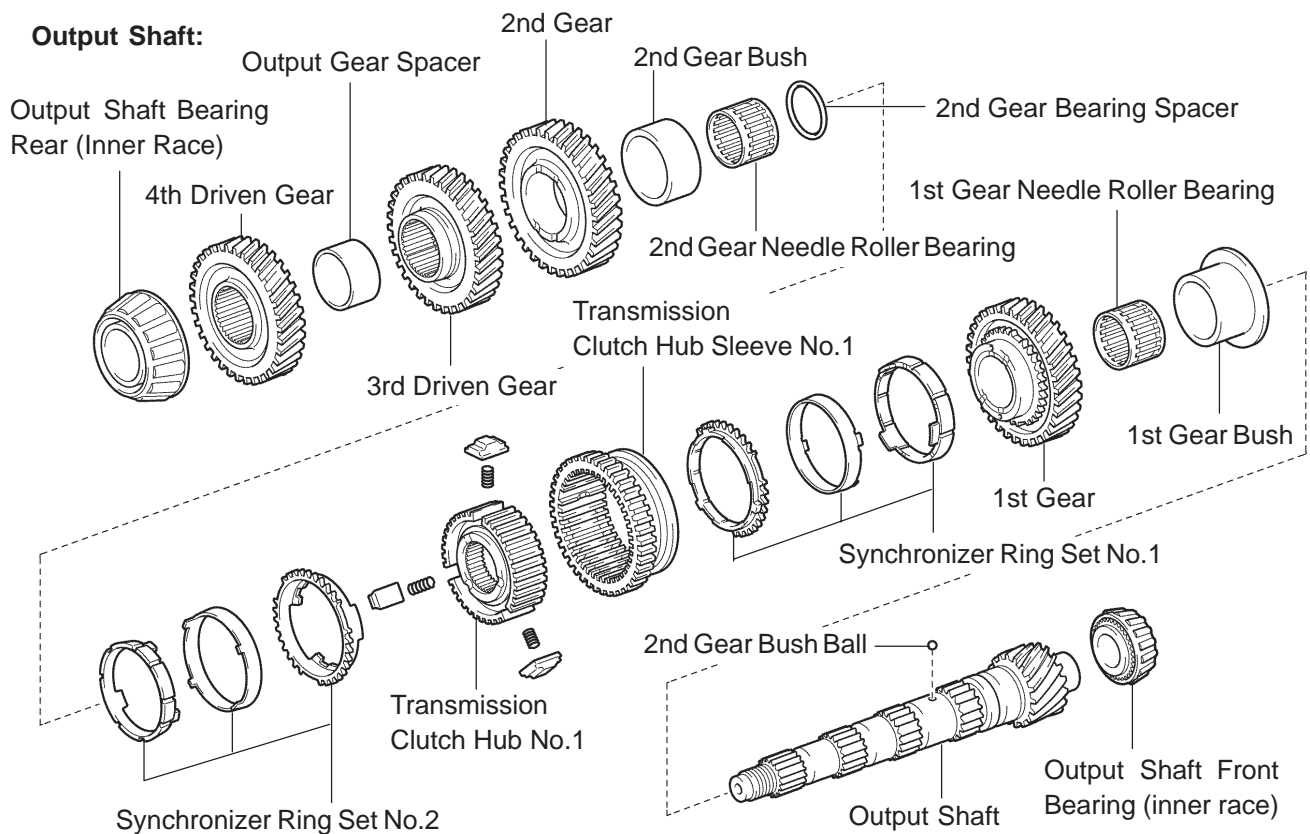
◆ Non-reusable part

★ Precoated part

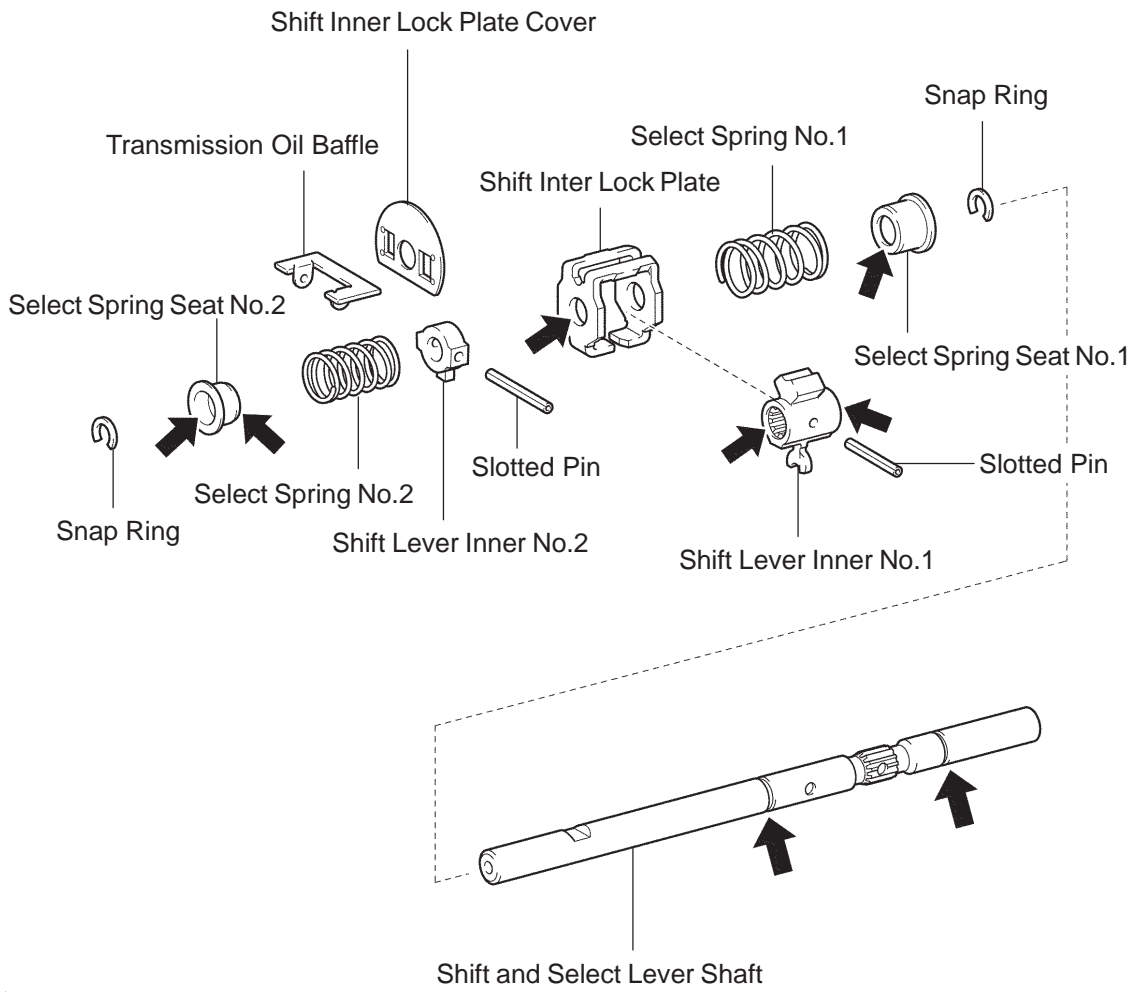
C91171

Input Shaft:

D08963

Output Shaft:

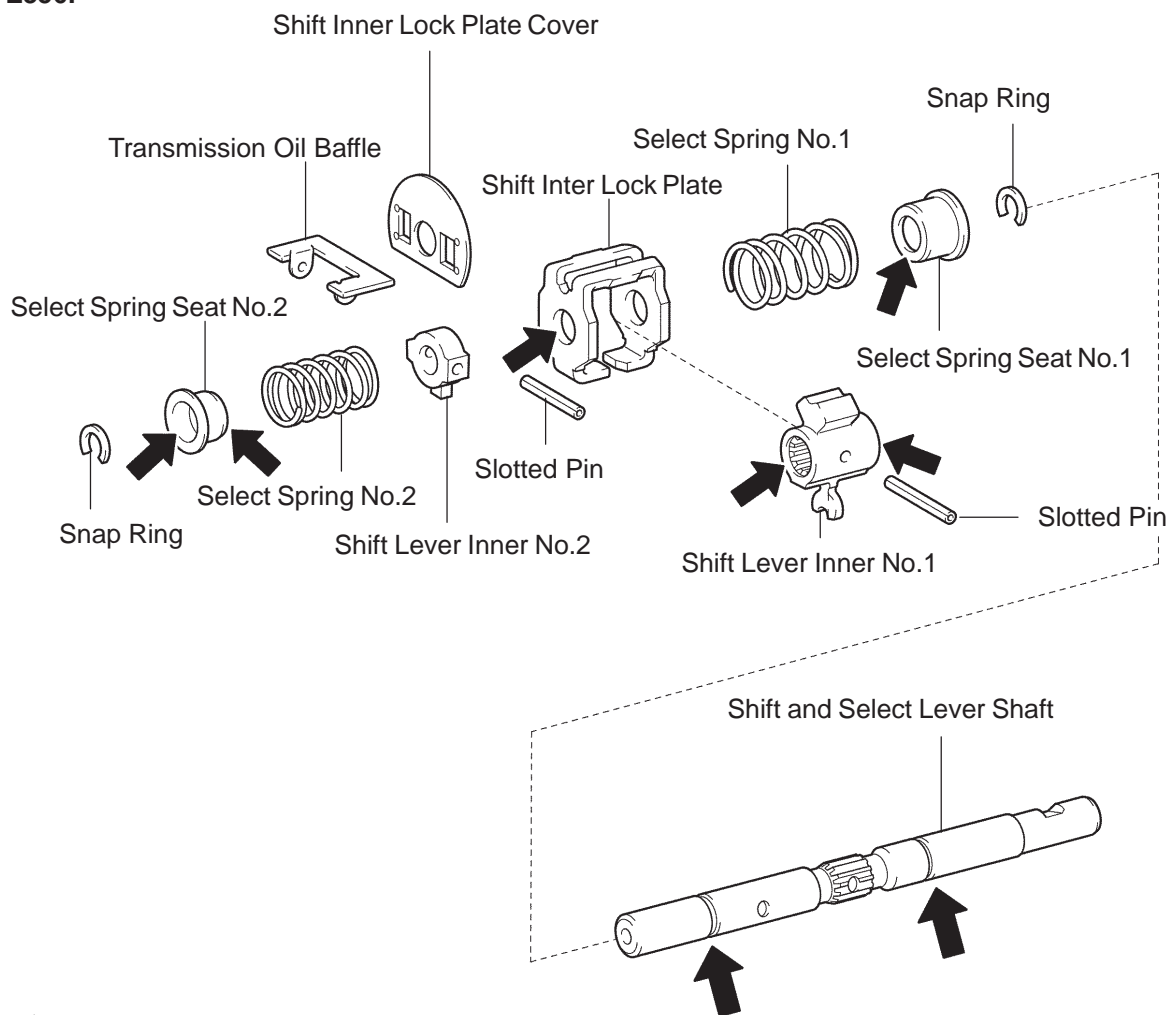
D08964

E355:

➡ Apply MP grease

P

D10974

E356:

 Apply MP grease

P

D09546

