


AMBIENT TEMPERATURE SENSOR (Auto A/C) INSPECTION

AC22Y-02


1. REMOVE FRONT GRILL

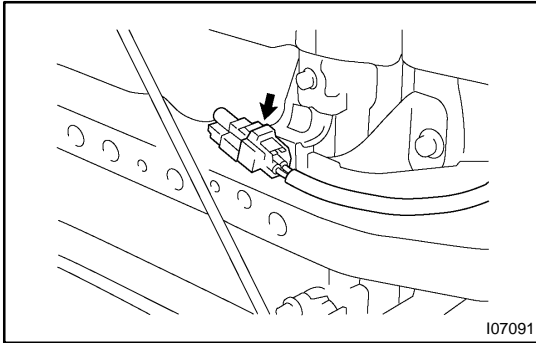

2. REMOVE AMBIENT TEMPERATURE SENSOR

- (a) Disconnect the connector.
- (b) Remove the sensor from the bumper reinforcement.

3. INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT (See page [DI-591](#))

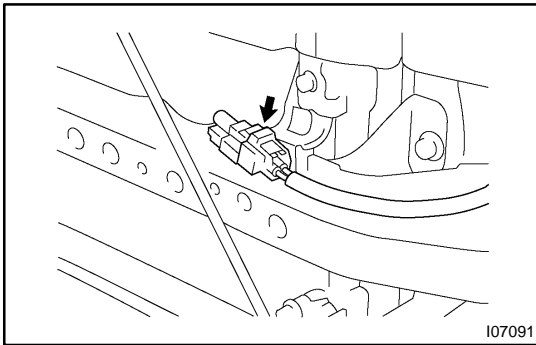

4. INSTALL AMBIENT TEMPERATURE SENSOR

- (a) Install the sensor to the bumper reinforcement.
- (b) Connect the connector.

5. INSTALL FRONT GRILL