



## BLOWER MOTOR INSPECTION


1. REMOVE GLOVE COMPARTMENT DOOR  
(See page [BO-69](#) )

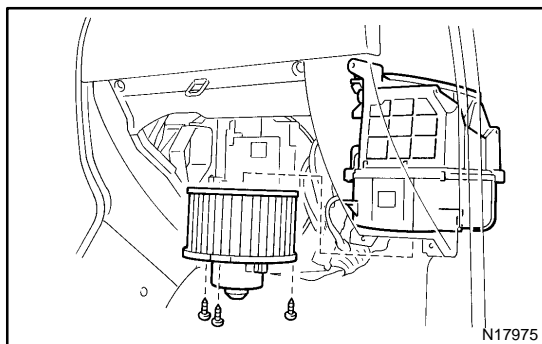

2. REMOVE BLOWER MOTOR
  - (a) Disconnect the connector.
  - (b) Remove the 3 screws and motor.

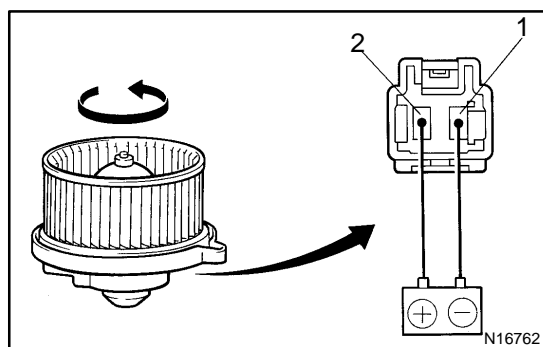

3. INSPECT BLOWER MOTOR OPERATION  
Connect the positive (+) lead from the battery to terminal 2 and the negative (-) lead to terminal 1, then check that the motor operations smoothly.  
If operation is not as specified, replace the blower motor.

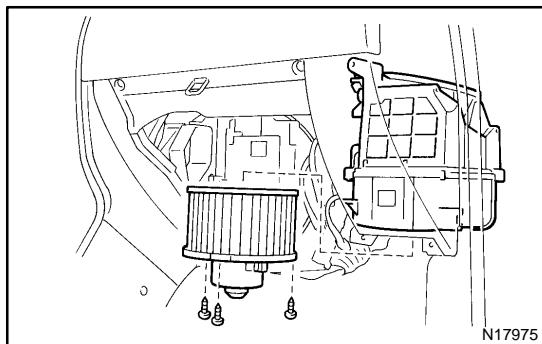

4. INSTALL BLOWER MOTOR
  - (a) Install the motor with the 3 screws.
  - (b) Connect the connector.
5. INSTALL GLOVE COMPARTMENT DOOR  
(See page [BO-76](#) )