

DISASSEMBLY

1. Auto A/C models:

REMOVE EXTRA-HI RELAY

Remove the screw and extra-hi relay.

2. **REMOVE AIR INLET SERVOMOTOR**

Remove the 3 screws and servomotor.

3. **REMOVE BLOWER MOTOR**

Remove the 3 screws and blower motor.