

REMOVAL

1. REMOVE GLOVE COMPARTMENT DOOR
2. REMOVE GLOVE COMPARTMENT REINFORCEMENT
3. REMOVE NO. 2 INSTRUMENT PANEL LOWER FINISH PANEL
4. REMOVE NO. 4 HEATER TO REGISTER DUCT
5. REMOVE FRONT DOOR SCUFF PLATE RH
6. REMOVE COWL SIDE TRIM RH
7. REMOVE COOLING UNIT (See page [AC-26](#))
8. REMOVE BLOWER UNIT
 - (a) Disconnect the connector from the blower motor.
 - (b) Disconnect the air inlet damper control cable from the blower unit.

HINT:

At the time of installation, please refer to the following item.

After connection, adjust the control cable.

- (c) Remove the nut, bolt and blower unit.