



# BLOWER MOTOR LINEAR CONTROLLER (Auto A/C) INSPECTION

AC23C-02

1. REMOVE GLOVE COMPARTMENT PARTS (See page [BO-69](#) )

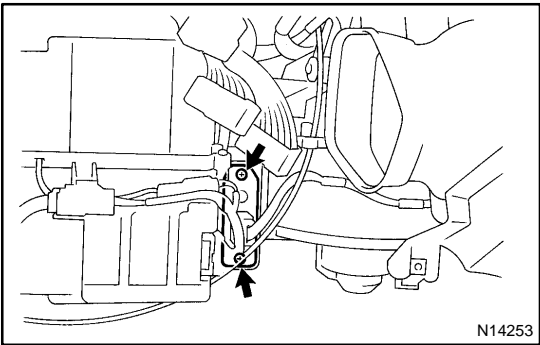


2. REMOVE BLOWER MOTOR LINEAR CONTROLLER
- (a) Disconnect the connector.
  - (b) Remove the 2 screws and blower motor linear controller.

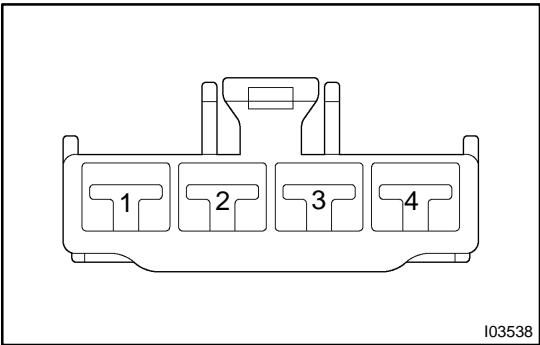

3. INSPECT BLOWER MOTOR LINEAR CONTROLLER CIRCUIT
- (a) Disconnect the connector from the relay and inspect the connector on wire harness side, as shown in the chart below.
- Test condition:  
Ignition switch ON

Tester connection	Condition	Specified condition
1 - Ground	Constant	Continuity
3 - Ground	Constant	Battery voltage

If the circuit is as specified, try to replace the controller with a new one. If the circuit is not as specified, inspect the connected to other parts.

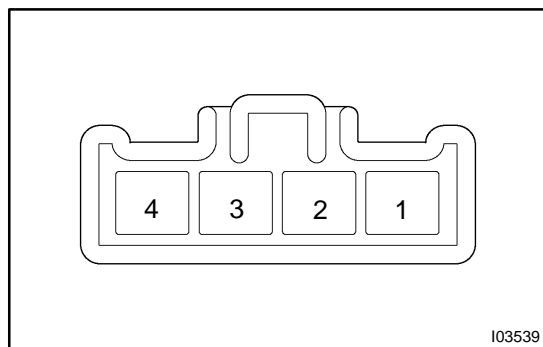


- (b) Connect the connector to the relay and inspect the wire harness connector from the back side, as shown in the chart below.

Test condition:

Ignition switch ON

Tester connection	Condition	Specified condition
4 - Ground	Constant	Battery voltage

If the circuit is as specified, try to replace the controller with a new one. If the circuit is not as specified, inspect the connected to other parts.

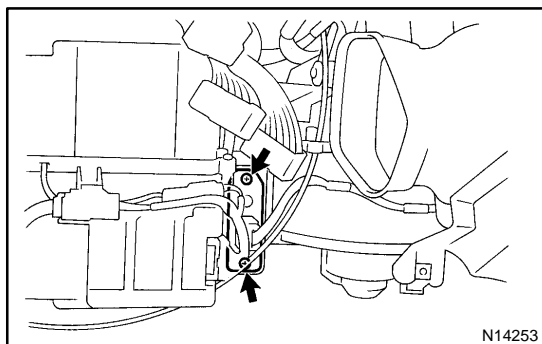

#### 4. INSTALL BLOWER MOTOR LINEAR CONTROLLER

- (a) Install the blower motor linear controller with the 2 screws.  
 (b) Connect the connector.

#### 5. INSTALL GLOVE COMPARTMENT PARTS (See page [BO-76](#))