

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of installation, please refer to the following item.


Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 650 ± 50 g (22.92 ± 1.76 oz.)

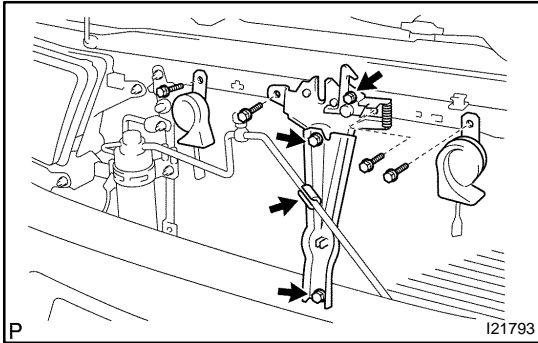

2. REMOVE RADIATOR GRILL
3. REMOVE HORN
4. REMOVE HOOD LOCK
5. REMOVE CENTER BRACE
6. REMOVE RECEIVER AND HOLDER
(See page AC-58)

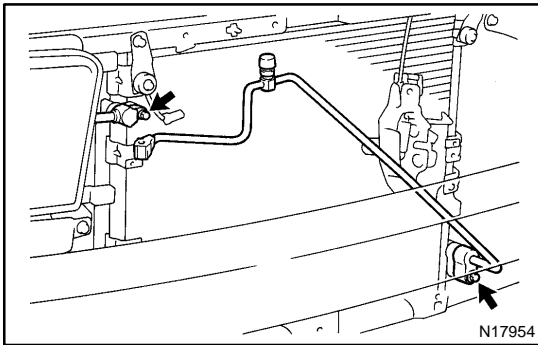

7. DISCONNECT LIQUID TUBE AND DISCHARGE HOSE

Remove the 2 bolts and disconnect the both tube and hose.

Torque: 10 N·m (100 kgf·cm, 7 ft·lbf)


NOTICE:

Cap open the fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of installation, please refer to the following item.

Lubricate 2 new O-rings with compressor oil and install them to the tubes.

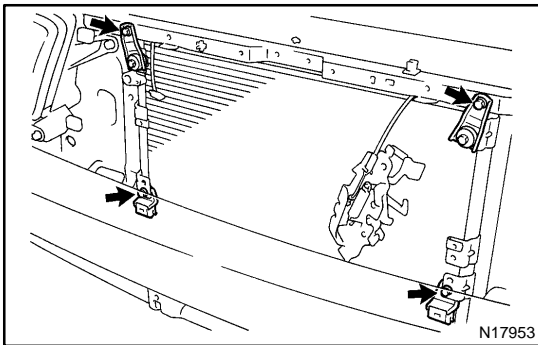

8. REMOVE CONDENSER

- (a) Remove the 2 bolts and 2 lower brackets.
- (b) Remove the 4 bolts and 2 upper brackets.
- (c) Pull the condenser forward and pull it upward.

HINT:

At the time of installation, please refer to the following item.

If condenser is replaced, add compressor oil to the compressor.

Add 40 - 50 cc (1.4 - 1.7 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent