


REMOVAL

1. REMOVE PS PUMP DRIVE BELT (See page [SR-33](#))
2. REMOVE ENGINE UNDER COVER

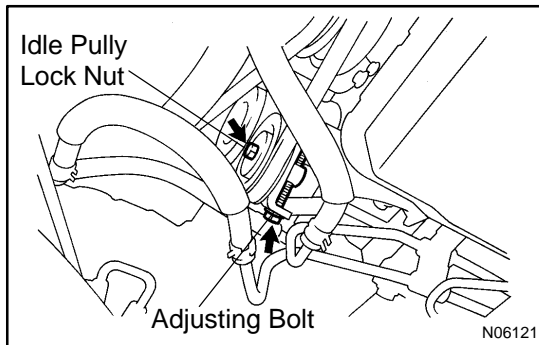

3. REMOVE DRIVE BELT

- (a) Loosen the idle pully lock nut.
- (b) Loosen the drive belt tension by adjusting bolt and remove the drive belt.