



ENGINE COOLANT TEMPERATURE (ECT) SENSOR (Auto A/C) INSPECTION

AC22Z-02

1. REMOVE COOLING UNIT (See page [AC-26](#))

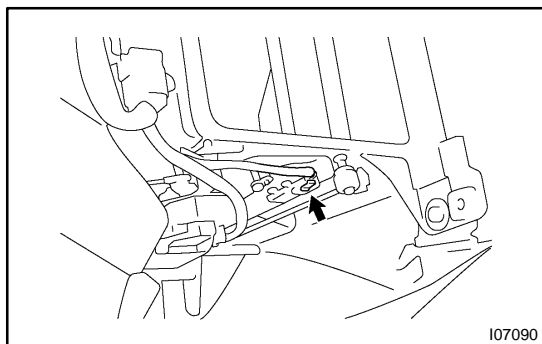

2. REMOVE ENGINE COOLANT TEMPERATURE SENSOR
 - (a) Disconnect the connector from air mix servomotor.
 - (b) After pulling off the clamp, pull out the sensor.
3. INSPECT ENGINE COOLANT TEMPERATURE SENSOR CIRCUIT (See page [DI-597](#))

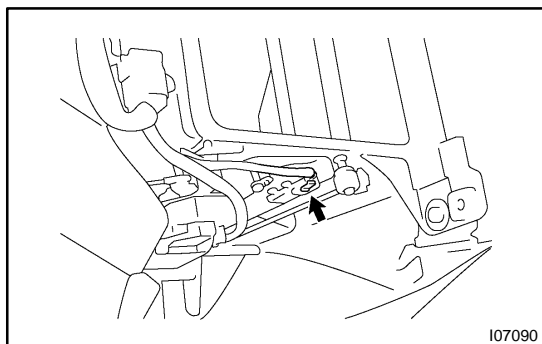

4. INSTALL ENGINE COOLANT TEMPERATURE SENSOR
Install the sensor with the holder.
5. INSTALL COOLING UNIT (See page [AC-31](#))