


EXTRA-HI RELAY (Auto A/C) INSPECTION

AC232-01

1. REMOVE EXTRA-HI RELAY FROM BLOWER UNIT
Remove the screw and extra-hi relay.

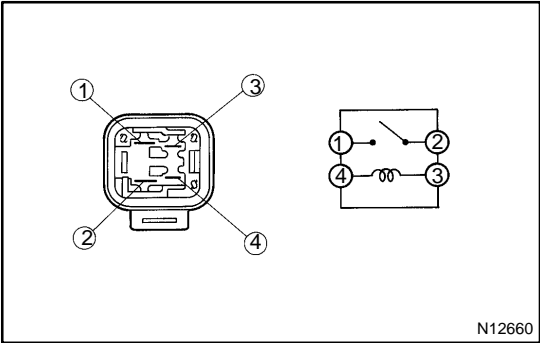

2. INSPECT EXTRA-HI RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	3 - 4	Continuity
Apply B+ between terminals 3 and 4.	1 - 2	Continuity

If continuity is not as specified, replace the relay.