


REMOVAL

1. REMOVE PARKING BRAKE HOLE COVER
2. REMOVE UPPER CONSOLE PANEL
3. REMOVE CENTER CLUSTER FINISH PANEL (See page [BO-69](#))

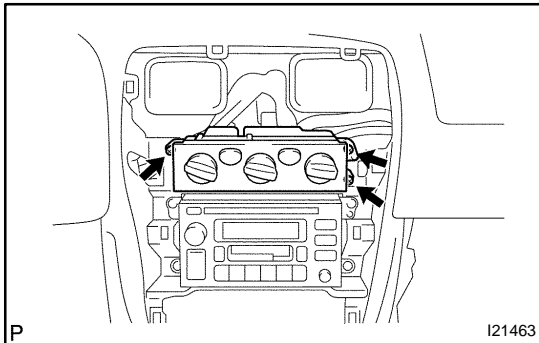

4. REMOVE HEATER CONTROL ASSEMBLY

Remove the 3 screws and pull out the heater control assembly, then disconnect the connectors.