

## DISASSEMBLY

### 1. REMOVE AIR MIX SERVOMOTOR

- (a) Remove the water valve control cable.
- (b) Disconnect the connector.
- (c) Remove the 3 screws and servomotor.


### 2. REMOVE AIR OUTLET SERVOMOTOR

Remove the 3 screws and servomotor.

### 3. Auto A/C models:

#### REMOVE ENGINE COOLANT TEMPERATURE SENSOR

After pulling off the clamp, pull out the sensor.

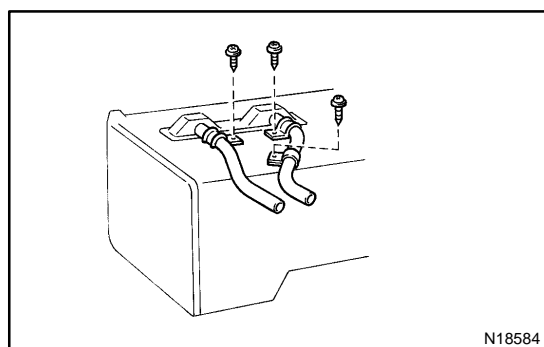

### 4. REMOVE HEATER RADIATOR

- (a) Remove the 3 screws and 2 plates and clamp.
- (b) Pull out the heater radiator.
- (c) Remove the 2 screws and 2 clips, then disconnect the heater radiator pipes.

### 5. REMOVE AIR VENT DUCT

Remove the 2 screws and duct.