


## REMOVAL

1. REMOVE COOLING UNIT (See page [AC-26](#) )
2. DRAIN ENGINE COOLANT FROM RADIATOR


HINT:

It is not necessary to drain out all the coolant.

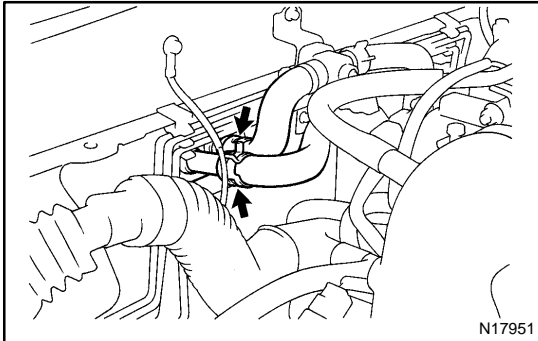

### 3. DISCONNECT WATER HOSES FROM HEATER RADIATOR PIPES

- (a) Using pliers, grip the claw of clip and slide the clip along the hose.
- (b) Disconnect the water hoses.

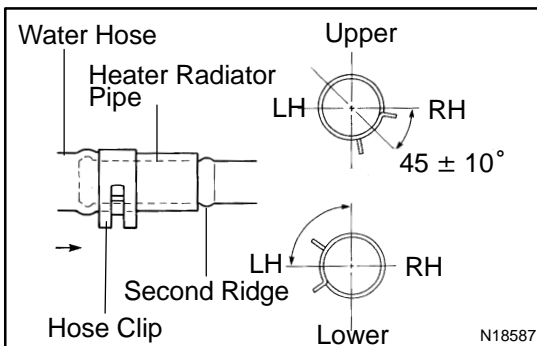

HINT:

At the time of installation, please refer to the following items.

- Push the water hose onto the heater radiator pipe as far as the second ridge on the pipe.
- Install the hose clip in a position, as shown in the illustration.

### 4. REMOVE INSTRUMENT PANEL AND REINFORCEMENT (See page [BO-69](#) )

### 5. REMOVE DEFROSTER NOZZLE AND HEATER TO REGISTER DUCT

### 6. REMOVE HEATER UNIT

- (a) Disconnect the connector from mode control servomotor.
- (b) Auto A/C models:  
Disconnect the aspirator hose from room temperature sensor.
- (c) Disconnect the water valve control cable.
- (d) Remove the 2 nuts and heater unit.