


# HEATER MAIN RELAY INSPECTION

AC230-01

1. REMOVE HEATER MAIN RELAY FROM NO. 2 RELAY BLOCK

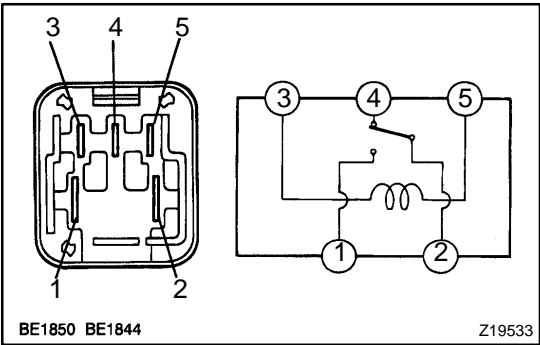

2. INSPECT HEATER MAIN RELAY (Making: HTR) CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 - 4 3 - 5	Continuity
Apply B+ between terminals 3 and 5	1 - 2	Continuity

If continuity is not as specified, replace the relay.