

REAR BLOWER SWITCH INSPECTION


AC23B-01

1. REMOVE REAR BLOWER SWITCH

Using a screwdriver, pry out the switch, then disconnect the connector.

HINT:


Tape the screwdriver tip before use.

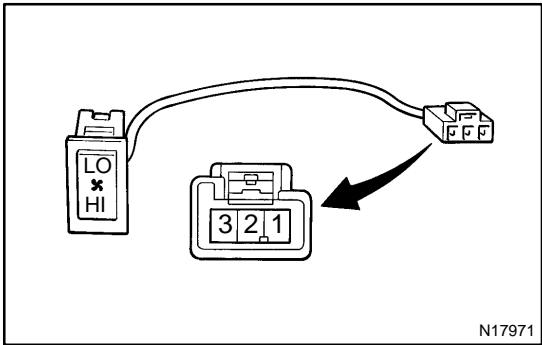

2. INSPECT SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
OFF	-	No continuity
LO	2 - 3	Continuity
HI	1 - 2 - 3	Continuity

If continuity is not as specified, replace the switch.

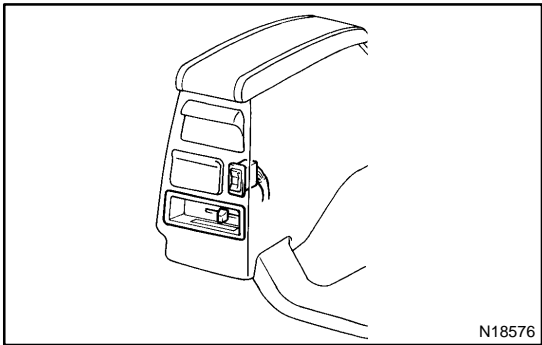

3. INSTALL REAR BLOWER RESISTOR

Install the switch, then connect the connector.