

REMOVAL

1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM


HINT:

At the time of the installation, please refer to the following item.
Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

Specified amount: 650 ± 50 g (22.92 ± 1.76 oz.)

2. REMOVE RADIATOR GRILLE

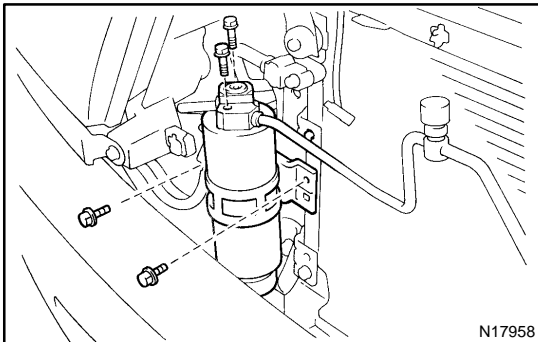

3. DISCONNECT 2 LIQUID TUBES FROM RECEIVER

Remove the 2 bolts and disconnect the both tubes.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

HINT:

At the time of the installation, please refer to the following item.
Lubricate 2 new O-rings with compressor oil and install them to the tubes.

4. REMOVE RECEIVER

(a) Remove the holder bolt and pull receiver downward.

HINT:

At the time of the installation, please refer to the following item.
If receiver is replaced, add compressor oil to compressor.

Add 20 cc (0.71 fl.oz.)

Compressor oil: ND-OIL 8 or equivalent

(b) Remove the bolt and holder.