


## REMOVAL

1. REMOVE REAR CONSOL BOX  
(See page [BO-69](#) )

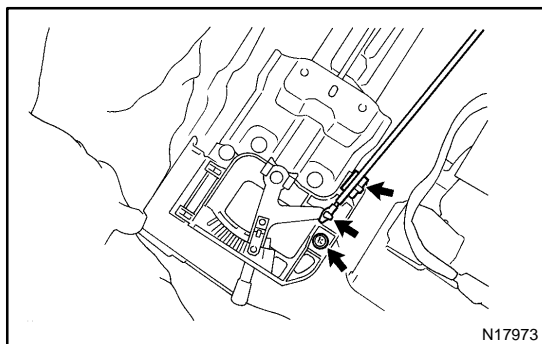

2. REMOVE HEATER CONTROL ASSEMBLY

- (a) Disconnect the control cable.

HINT:

At the time of installation, please refer to the following item.  
For installing the control cable refer to "INSTALLATION".

- (b) Remove the screw and heater control assembly.