


REAR HEATER RELAY INSPECTION

AC231-01

1. REMOVE REAR HEATER RELAY FROM REAR HEATER UNIT

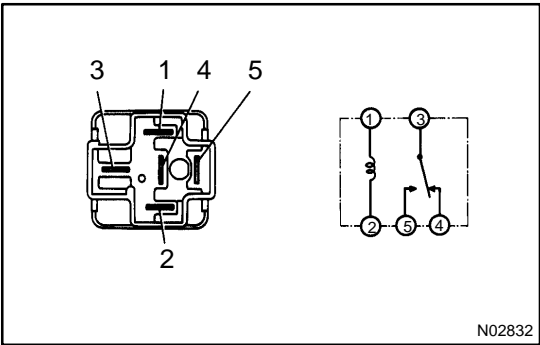

2. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2 3 - 5	Continuity
Apply B+ between terminals 1 and 2	3 - 5	Continuity

If continuity is not as specified, replace the relay.