



DISASSEMBLY


1. REMOVE BLOWER RESISTOR
2. REMOVE REAR HEATER RELAY
3. REMOVE WIRE HARNESS
4. SEPARATE HEATER CASES

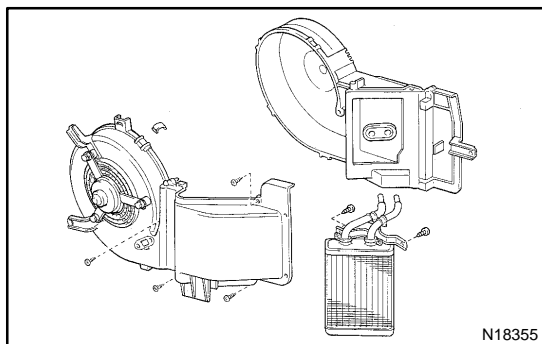

5. REMOVE HEATER RADIATOR
 - (a) Remove the wire harness clamps.
 - (b) Remove the 4 screws and 5 clips, then separate the heater cases.
 - (c) Remove the 2 screws and heater radiator.

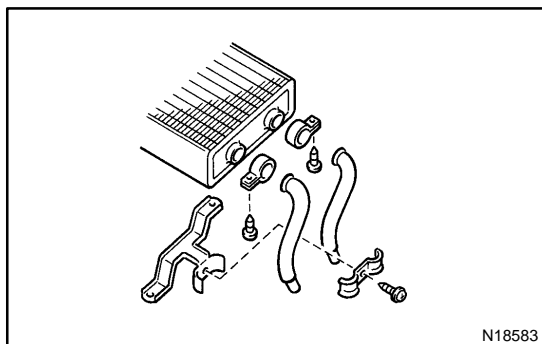

- (d) Remove the 2 screws and 2 piping clamps.
 - (e) Remove the 2 screws and 2 heater radiator pipes.

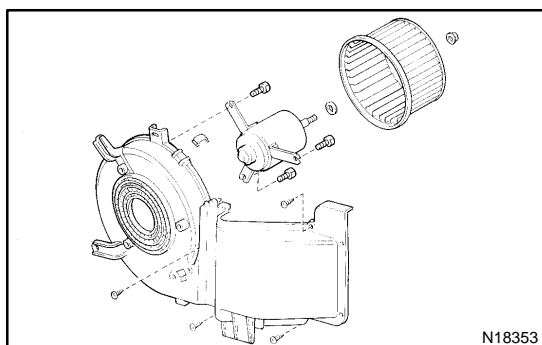

6. REMOVE BLOWER MOTOR
 - (a) Remove the wire harness clamps.
 - (b) Remove the 4 screws 5 clips and separate the heater cases.
 - (c) Remove the 3 screws and blower motor.
 - (d) Remove the nut and blower fan.