


INSPECTION

1. INSPECT FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

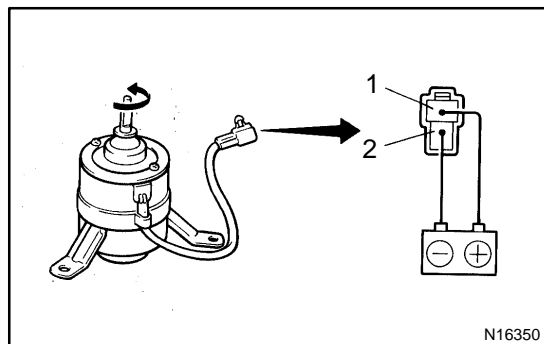

2. INSPECT BLOWER MOTOR OPERATION

Connect the positive (+) lead from the battery to terminal 1 and the negative (-) lead to terminal 2, then check that the motor operations smoothly.

If operation is not as specified, replace the motor.