

REMOVAL

1. DRAIN ENGINE COOLANT

HINT:



It is not necessary to drain out all coolant.

2. REMOVE FRONT SEATS

3. REMOVE CENTER CONSOLE BOX

4. SLIDE FLOOR CARPET BACKWARD

5. DISCONNECT WATER HOSES

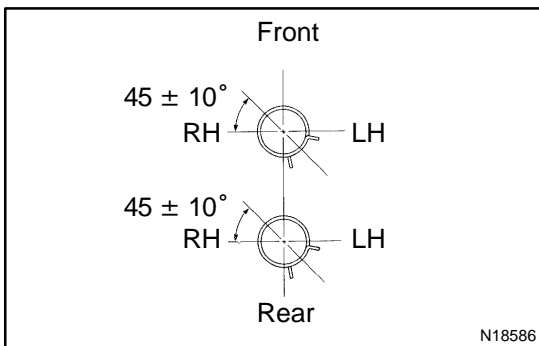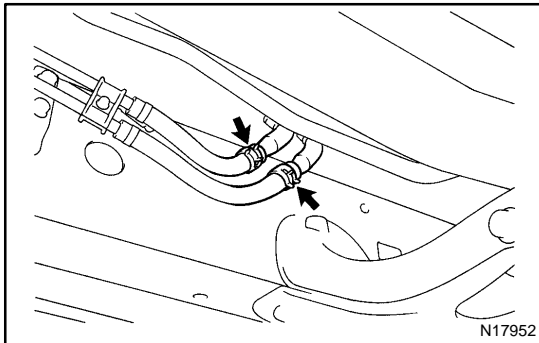


HINT:

At the time of installation, please refer to the following item.
Install the hose clip in a position, as shown in the illustration.

6. REMOVE REAR HEATER DUCT

Remove the bolt, screw and duct.

7. REMOVE REAR HEATER CONTROL ASSEMBLY (See page AC-101)

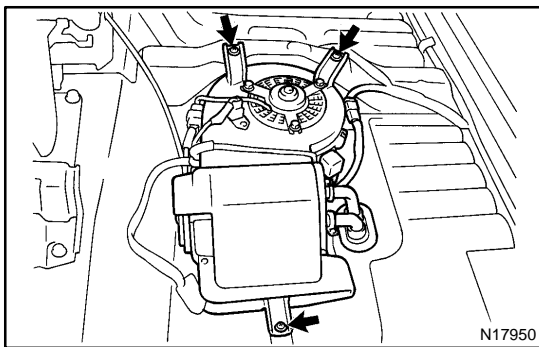

8. REMOVE REAR HEATER DUCT

- Disconnect the connectors.
- Remove the 3 screws and heater unit.