



ROOM TEMPERATURE SENSOR (Auto A/C) INSPECTION

AC22X-02

1. **REMOVE LOWER FINISH PANEL LH**
(See page [BO-69](#))

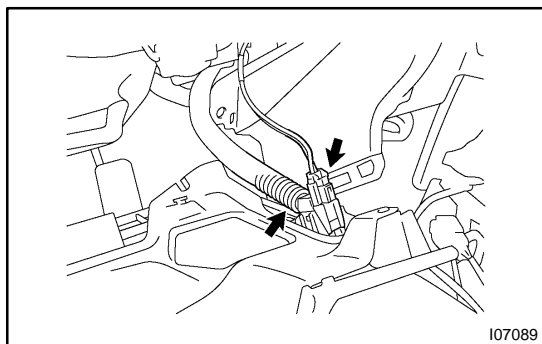

2. **REMOVE ROOM TEMPERATURE SENSOR**
 - (a) Disconnect the connector and aspirator hose.
 - (b) Pull out the sensor from lower finish panel.
3. **INSPECT ROOM TEMPERATURE SENSOR CIRCUIT**
(See page [DI-588](#))

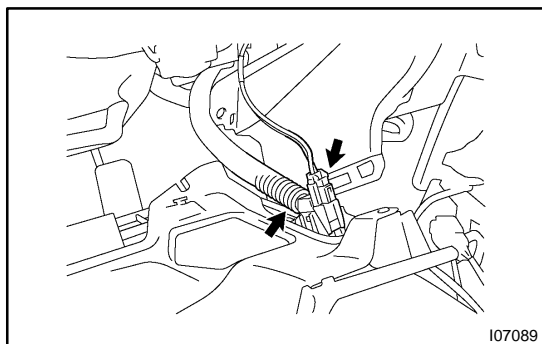

4. **INSTALL ROOM TEMPERATURE SENSOR**
 - (a) Install the sensor to lower finish panel.
 - (b) Connect the connector and aspirator hose.
5. **INSTALL LOWER FINISH PANEL LH**
(See page [BO-76](#))