

## SOLAR SENSOR (Auto A/C) INSPECTION

AC22W-01


### 1. REMOVE SOLAR SENSOR

Using a screwdriver, pull out the sensor with the holder, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

### 2. INSPECT SOLAR SENSOR CIRCUIT (See page [DI-600](#) )

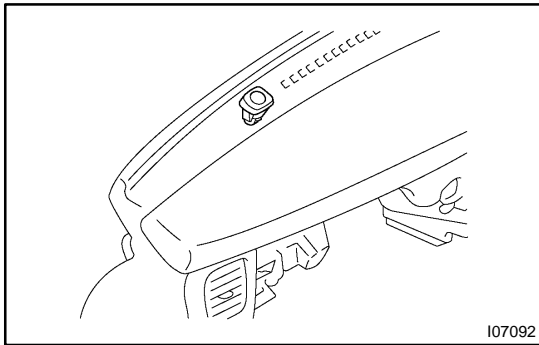

### 3. INSTALL SOLAR SENSOR

- Install the sensor to the holder.
- Install the sensor with holder to instrument panel, then connect the connector.

HINT:

Assemble the holder with the triangular cut-out facing forward.