


INSTALLATION

Installation is in the reverse order of removal
(See page [AC-64](#)).

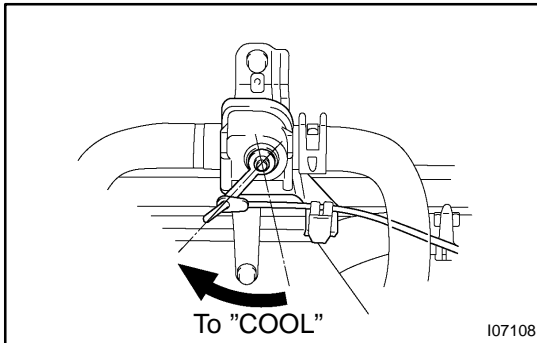

AFTER INSTALLATION, ADJUST WATER VALVE CONTROL CABLE

- (a) Ignition switch ON.
- (b) Set the temperature control door to "COOL" position and connect the control cable and lock the clamp.

HINT:

Lock the clamp during lightly pushing the outer cable in the direction, as shown in the illustration by an arrow.