

WATER VALVE

ON-VEHICLE INSPECTION

AC000-01

- 1. WARM UP ENGINE**
- 2. DISCONNECT WATER VALVE CONTROL CABLE**
- 3. INSPECT WATER VALVE OPERATION**
 - (a) Check that warm air blown out the vent when the water valve lever is moved to "WARM" position.
 - (b) Check that cool air blown out when the water valve is moved to the "COOL" position.If operation is not as specified, replace the water valve.
- 4. CONNECT WATER VALVE CONTROL CABLE**